

# UMX-10 Next Generation Iris Recognition System

User Manual  
(v0.1.1, July 1, 2016)



Intuitive face display positioning



Internal automatic motorized tilt cameras



LAN / RS485 Support independent input and output functions



Optional face image capture and face recognition

---

User graphics and screen shots in this guide may vary from actual  
Some of the contents in this manual may differ from current operating library release

## Introduction to the UMX-10 Iris Recognition System

This new iris recognition system offers highly intuitive, hands-free iris biometrics imaging in a compact and elegantly designed identification and authentication terminal for use in a wide range of identity management applications.

The front facing nominal 5.0 inch LCD serves to display the user's face image for fast, easy and highly natural positioning for proper iris image capture. The subject merely puts his or her face in the center of the LCD, and then moves toward the system to size his or her head to the brackets in the display to be in proper range. Image capture is fast and automatic. While user instructions are very simple, almost all subjects will be able to interact with the system without any directions.



UMX-10 Next Generation  
Iris Recognition System

And the internal automatic tilt mechanism adjusts to the user's height or vertical position over a range of 50 cm (about 20 inches), making the UMX-10 ideal for countertop, desktop, wall mount or kiosk installations.

The UMX-10 is an embedded terminal, which means that all image processing and machine control is performed on the internal Linux-on-ARM mainboard. Typical connectivity to host systems is through TCP/IP (Ethernet). And iris biometric encoding and matching is typically performed on-board as well, so identification or authentication decisions are made locally for fast responsiveness. For access control, there are Wiegand connections for dedicated, local communications to door controllers or panels.

For all specifications, please see Specification section.

For complete depiction of all UMX-10 on-board screens, see "UMX-10 LCD Control Screens and On-Board Demo Application" manual.


## Key Features

- Iris user interface with intuitive LCD display face positioning, like smart phone “selfie”
- Contactless iris imaging at range of 35 to 45 cm stand-off
- Internal, automatic face and iris camera tilt mechanism with nominal height range of 50 cm
- Positioning guidance vocalizations selectable on / off and delay time. English standard, all other languages available with .wav file substitution
- Simultaneous dual iris recognition with typical capture speed of under 1 second
- On-board iris encoding and matching, with internal data base of up to 10,000 users in either 1:1 (authentication) or 1:N (identification) modes
- Optional Combined Face and Iris modes:
  - Face as primary modality, with face recognition rejects decisions automatically switch over to iris recognition
  - Supplemental face recognition in case of iris recognition failure-to-capture (FTC), so that face recognition follows iris recognition attempt
- Supports dual factor authentication with card or PIN
- Optimized imaging for difficult ambient lighting conditions
- Optimized image capture for most sunglasses, glasses, and facial veils
- Supports imaging of all iris colors
- Kensington lock slot standard
- Standard communications connectors and protocols for TCP/IP (Ethernet RJ-45), RS-484 and -232, dual Wiegand I/O, TTL, and dry contact relay
- Connection cables with press-in connectors included in accessories kit
- External audio connector
- Tamper switch on rear panel
- Access control (AC) configuration includes wall mount plate
- Integrated Smart Card reader (choice of basic MiFare / DesFire card or HID multi-class reader)
- Meets CE mark, FCC, IEC 62471 eye safety, and RoHS standards. Iris recognition meets ISO 19794-6 2011 standard
- Design and production meet ISO 9001 2011 standard

## Accessories Kit

Includes:	ID Management Version	Access Control and Time & Attendance Versions
Power supply (IEC C13 female)	Yes	Yes
Power cord (IEC C14 male), power side connector type by country	Yes	Yes
Basic MiFare / DesFire card reader (internal)	No	Yes
Standard back cover	Yes	Yes
Wall mount bracket	No	Yes
ID I/O cables with push in connectors for device, and pig tails for external connections	Yes	No
Includes cables for RS 485, RS 232, TTL (2), dry contact relay		
AC I/O cables with push in connectors for device, and pig tails for external connections	No	Yes
Includes cables for Wiegand (2), RS 485, RS 232, TTL (2), dry contact relay		
Ferrite core and diode	Yes	Yes
Back cover / plate screw (M4) (not security type)	Yes	Yes

## Mounting Instructions

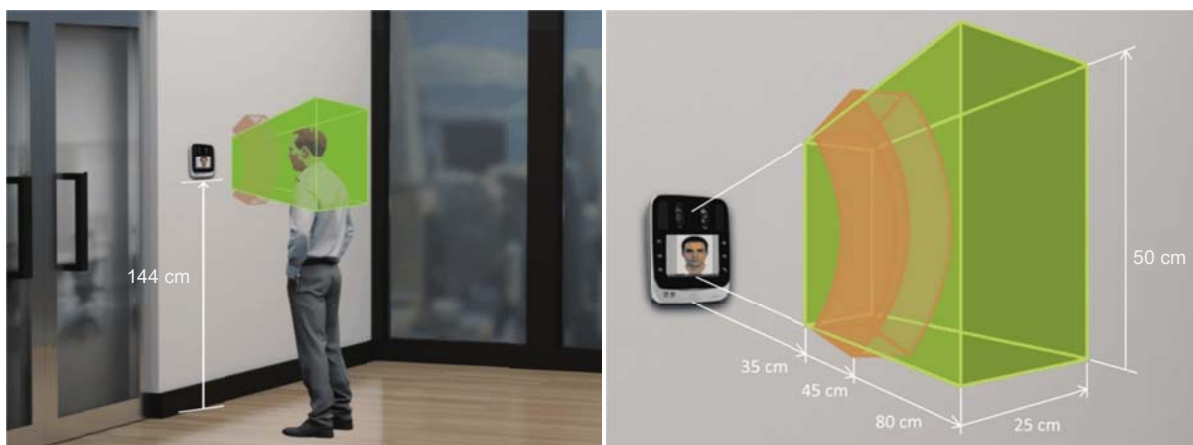

Recommended mounting height and UI (left), Capture Volume of UMX-10 (right)

The recommended mounting height for the UMX-10 is 144cm (57 inches) from floor to the bottom of UMX-10. The mounting height can be adjusted to accommodate the height of the average user.

High ambient light and / or direct light into the UMX-10 should be avoided. Sunlight, halogen lamps or other strong illumination may reduce the performance of the UMX-10 and may result in increased failure-to-capture rates or failed authentication events.

The UMX-10 was designed for indoor use only. This unit is not weatherproof and must not be exposed to water, ice, extreme temperatures or other adverse weather conditions. If it is required to use this unit in outdoor or extreme environments contact local sales or [support@cmi-tech.com](mailto:support@cmi-tech.com) for more information.


Note: Installation in extreme environments without proper protection may cause permanent damage and void warranty.

See System, Rear diagram for wall mounting instructions.


## System, Front




## System, Bottom

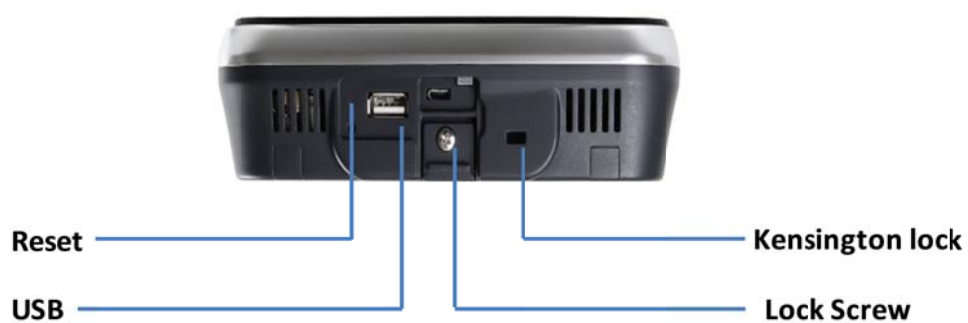

## System, Rear

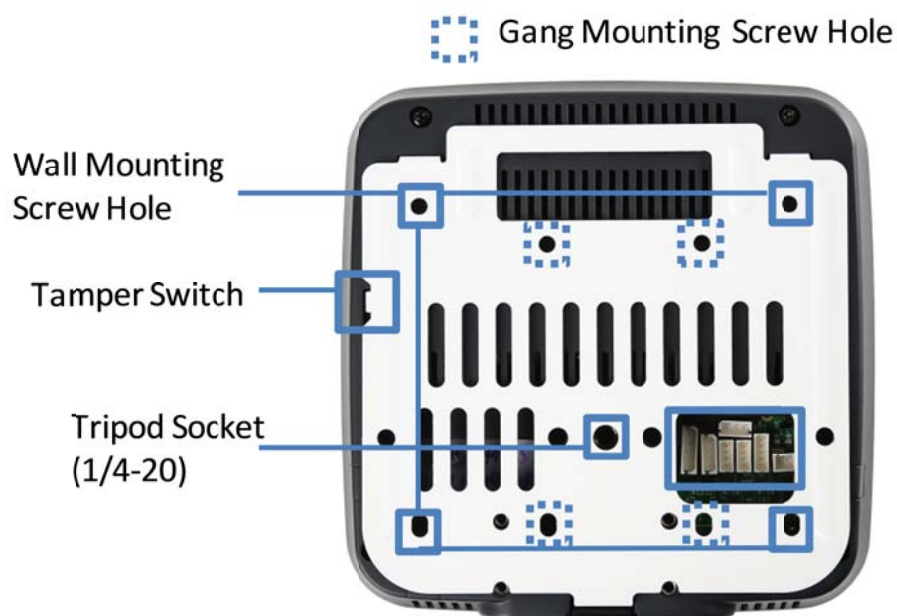

## System Rear Connections Block

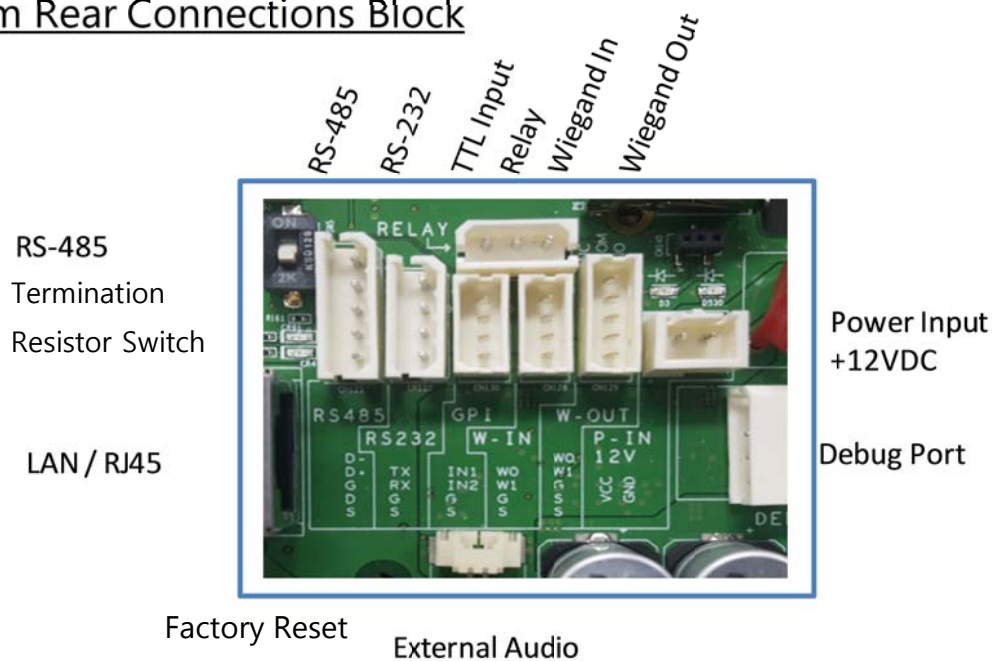

## User Interface for Iris Image Capture

- Position yourself facing straight at the LCD display. When the device detects your movement within 1.0 meter parameter, it initiates the image capture sequence. A rectangular-shaped user guide box will appear on the screen. If it is BLUE, it means you are too far from the device. Move forward.



- Move towards the system to size your face to the LCD display. If the user guide box flashes GREEN, it means you are at an appropriate position. Stop and hold your position until the device captures image of your face and/or iris.



- If you are standing too close to the device, your face will not fit in the LCD display. When the user guide box flashes RED, it means the device cannot capture your image because you are too close. Move back until the box turns green.




- UMX-10 captures the image of your face and iris automatically.



## On-board Demonstration Application


The on-board demonstration application shows the full capabilities of the UMX-10 for image capture including subject positioning with the face display user interface, enrollment, and on-board matching (authentication).

The system boots up in this demo application. It is initiated by the video based motion detector that first finds the subject from about 1 meter distance, and then continues the natural iris image capture sequence for capture in recognition / authentication mode.

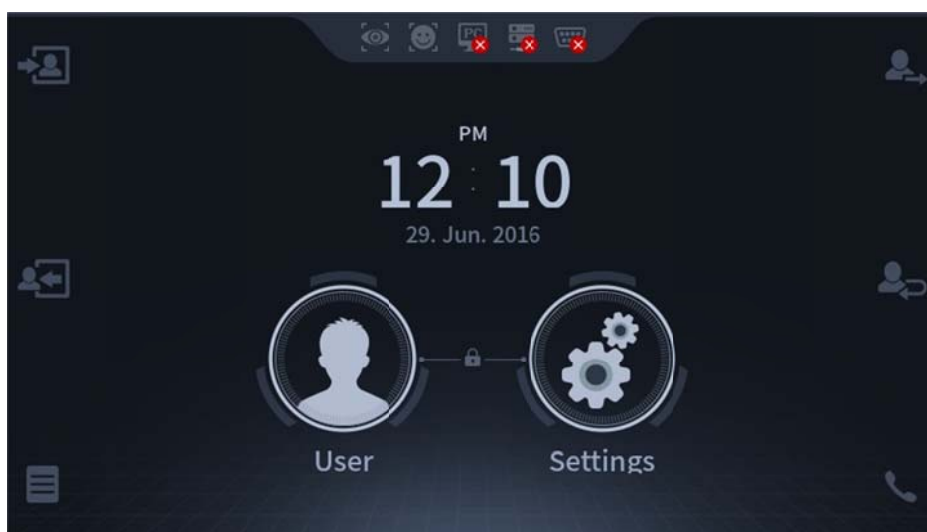


To switch to enrollment mode, press large User icon in center of main Launcher page. If the system is in image capture mode, press Home icon (🏠) on top left of active user interface display, which will stop Recognition mode and return system to Launcher page.

The following main User screen appears:

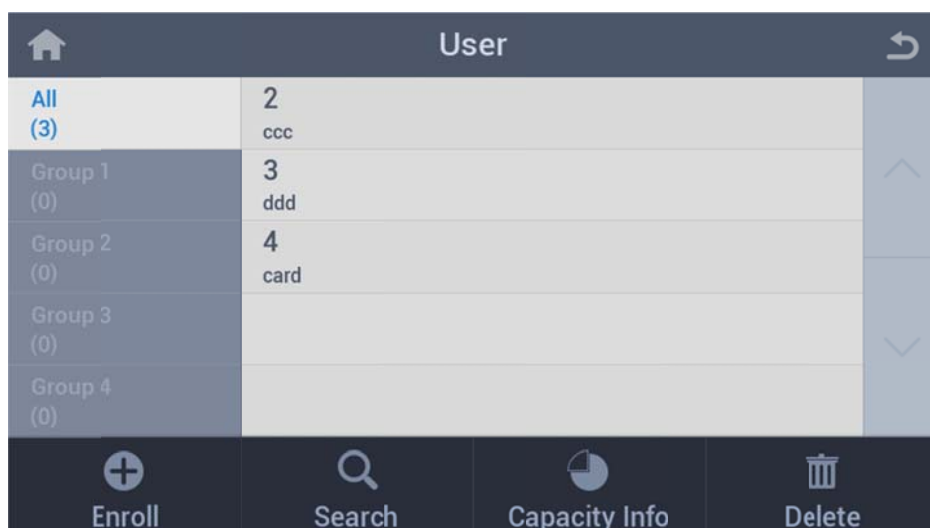


This user screen also allows simple database management. By tapping the **Delete** icon in the bottom right, one can easily delete information of enrolled users.

To enroll a new user, press the **Enroll** icon to bring up **Enroll User** screen.

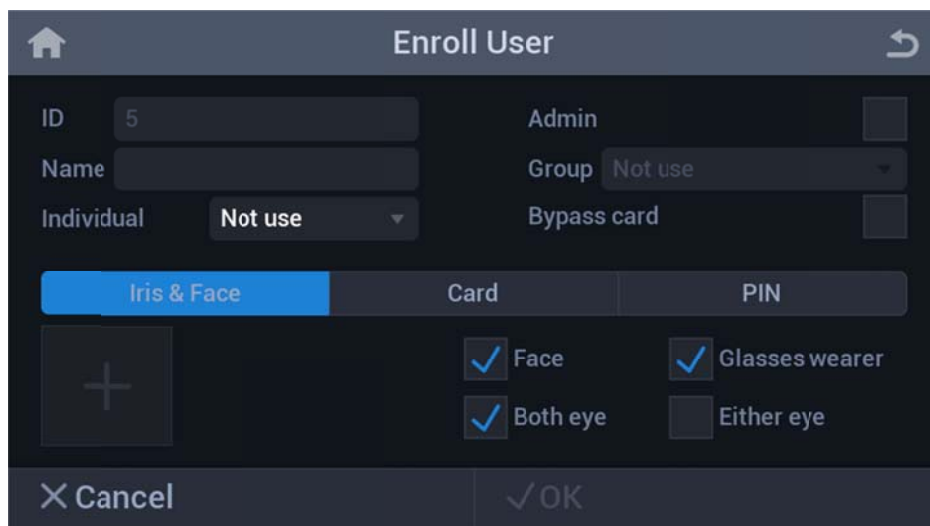


Press the plus(+) button in the bottom left to capture image of the new user.

An instruction screen will appear for 3 to 5 seconds, and then switch to the user interface.

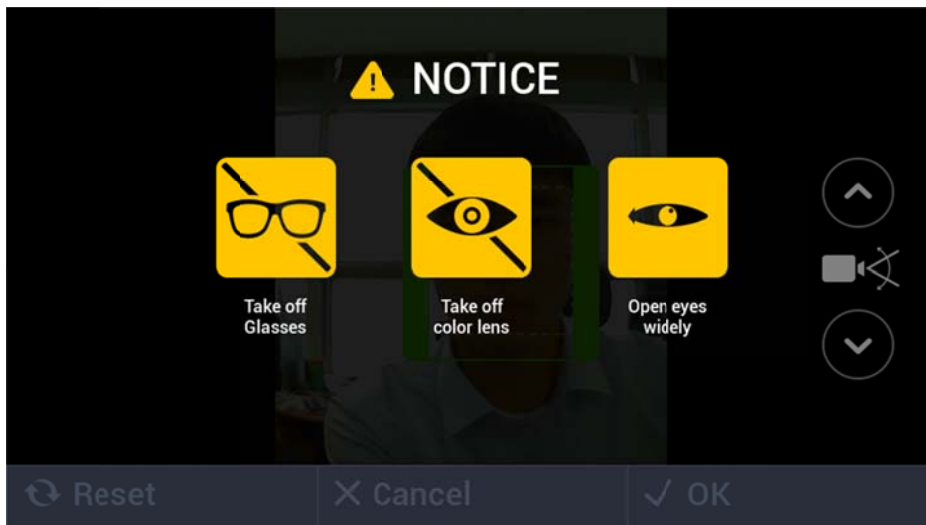

After successfully capturing iris images, click on **✓OK** to accept images. The system then returns to Enroll User screen. Click on Name field to enter name of subject, then click on **✓OK** complete enrollment.

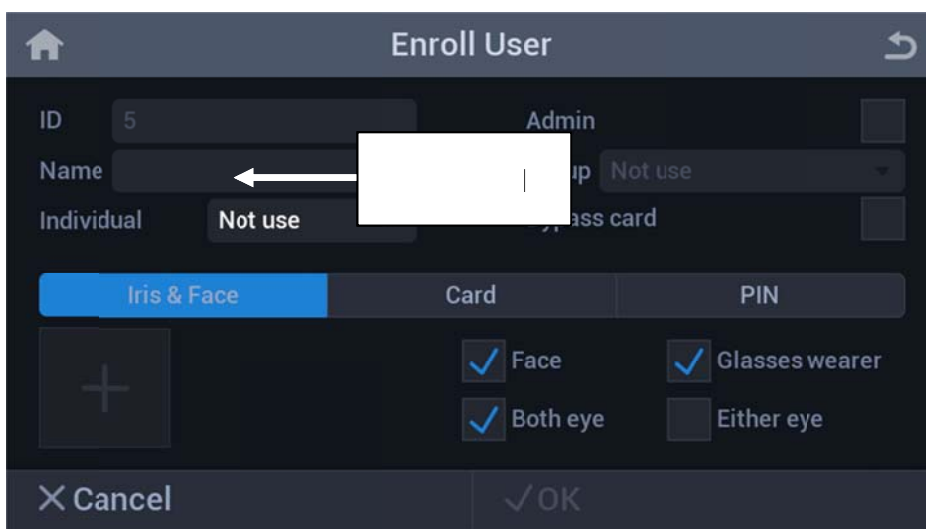

Press the Home icon (🏠) to return to the Launcher page to re-start Recognition and Authentication mode.

## Summary of Specifications

### Software and Platform Technical Specifications (Tentative)

Embedded CPU and OS	Freescall iMX6 Cortex A9 Quad Core ARM with Linux Yocto v1.8 OS
Iris on-board algorithm for encoding and matching	Optional
Face on-board algorithm for Combined Face and Iris encoding and matching	Optional
Web services configuration application (with embedded web server)	Yes, RESTful type SDK with C# and C++ versions for host side

### Other Technical Specifications (Tentative)

Dimensions	166 x 166 x 43 mm(6.5 x 6.5 x 1.7 inches) without mounting wall plate
Weight	630 g without wall plate
On-board data size	Up to 10,000 iris template pairs, usable in either 1:1 (authentication) or 1:N (identification) modes Supports dual factor authentication
Iris image output	Meets new ISO 19794-6 2011 standard: MTF of minimum of 4.0 lp/mm @ ≥ 60% contrast, and 160 pixels across 1.0 cm iris
Iris image pixel resolution	640 x 480 pixels, 8 bit depth. Supports multiple formats.
Iris encoding and matching algorithm	Delta ID (ISO 19794-6 compliant)
Operational iris imaging distance (stand-off range) and depth of field	35 to 45 cm range (10 cm depth of capture range) in both Enrollment and Recognition modes
Iris positioning indicators	Face positioning within box in LCD display for X – Y Face sizing to bracket (or box) within LCD display for distance (Z) positioning with simultaneous color bar display for correct distance positioning: Blue: too far away Green: OK Red: too close  Supplemental voice distance feedback standard. Convertible to local language via .wav file substitution.

## Other Technical Specifications (Tentative) (continued)

Auto tilt	Yes, internal: +25 deg to -20 deg tilt
Iris inter-pupillary distance covered	45 to 85 mm
Iris time of capture	Typically about 0.5 second from time subject's eyes are placed within proper capture volume
IR illumination for iris imaging	Dual LED: wavelengths of 850 nm nominal (about 50%); and 750 nm nominal (about 50%)
Iris maximum user positioning speed	125 mm per second (4.9 inches per sec.) in "Z" direction (distance from front of system)
Face image capture	Standard 24 bit color (for reference image)
Face recognition imaging	Optional on-board encoding and matching. Algorithm tbd.
Audio	24 bit, 1.8 W embedded speaker Line out connector for external speaker
Operating temperature range	0 to 45°C
Humidity	10 to 90% RH, non-condensing
Illuminator eye safety standard	IEC 62471
Network interface	10/100 Base-T Ethernet (RJ45 connector)
Other standard ports	USB host or slave (for service only)
Standard mounting	¼ - 20 UNC (camera tripod).
Physical Access Control (PACS) configuration: other communications ports	Terminal and wired connectors for: Wiegand in/out, RS-232, RS-485, 2X TTL inputs, USB host (internal), USB slave (for service), 1 dry contact relay
Physical Access Control configuration: internal ID card reader	Standard: ISO /IEC 14443 A/B (MiFare) contactless reader Optional: HID multi-class reader (model to be determined)
Physical Access Control configuration: wall mounting with tamper switch	Detachable wall mount plate for easy installation. Tamper switch standard in PACS configuration
Power supply	Input 110 to 240V AC Output 12V DC, 3.5A. Provided standard with system.

## Contact Information

### **CMITech Company, Ltd.**

#904, 25, 248Beon-gil, Simin-daero, Dongan-gu,  
Anyang-si, Gyeonggi-do,  
431-815 Republic of Korea  
Tel : +82.70.8633.8278  
Fax: +82.31.624.4490  
Contact: sales@cmi-tech.com

### **CMITech America, Inc.**

2033 Gateway Place, Suite 500  
San Jose, CA 95110 USA  
Tel: (1) 408 573-6930

## Appendix 1

# UMX-10 LCD Control Screens and On-Board Demo Application



Main Launcher Page

- |   |   |
|---|---|
| ① Check Attendance (F1 Key)               | ⑧ Notice Icon of Face mode is operating                           |
| ② Leave Work (F2 Key)                     | ⑨ Notice Icon of CMID manager is connected                        |
| ③ Supplement T&A (F3 Key)                 | ⑩ Notice Icon of IP network is connected                          |
| ④ Go Out (F4 Key)                         | ⑪ Notice Icon of Serial Communication is connected                |
| ⑤ Return Button (same as F5 Key)          | ⑫ Clock display   |
| ⑥ Interphone Call Button (same as F6 Key) | ⑬ User Button for registration, search, modification and deletion |
| ⑦ Notice Icon of Iris mode is operating   | ⑭ Settings Button for system configuration                        |

# Table of Contents

## Settings



### 1 Device

- 1.1 Configuration
  - 1.1.1 User Positioning Interface
  - 1.1.2 Motion Wait Time
- 1.2 Bio
  - 1.2.1 Security Level
  - 1.2.2 Iris
    - 1.2.2.1 Max Distance
- 1.3 Sound
  - 1.3.1 Speaker Volume
  - 1.3.2 MIC Volume
- 1.4 Date & Time
  - 1.4.1 Manual Setup
- 1.5 Door
  - 1.5.1 Relay
  - 1.5.2 Driven By
  - 1.5.3 Duration
  - 1.5.4 Door Sensor
  - 1.5.5 Door Sensor Type
  - 1.5.6 Held Open Period(sec)
  - 1.5.7 Lock Time
  - 1.5.8 Unlock Time
- 1.6 Device Info
- 1.7 Interphone
  - 1.7.1 IP Address
- 1.8 Memory Info
- 1.9 Camera
  - 1.9.1 Power Line Frequency
- 1.10 Reset
  - 1.10.1 Reboot
  - 1.10.2 Factory Default
    - 1.10.2.1 Reset All Settings
    - 1.10.2.2 Delete All Data
    - 1.10.2.3 Delete All Data and Reset All Settings

### 2 Network

- 2.1 TCP/IP
  - 2.1.1 LAN Type
  - 2.1.2 IP Address
  - 2.1.3 Gateway
  - 2.1.4 Subnet
- 2.2 Server
  - 2.2.1 Server IP
- 2.3 Serial
  - 2.3.1 RS485-PC
  - 2.3.2 RS485-NET
  - 2.3.3 RS232
- 2.4 USB Memory
  - 2.4.1 FW Upgrade
  - 2.4.2 Import
  - 2.4.3 Export

### 3 Display

- 3.1 Voice Instruction
- 3.2 Central Timer
- 3.3 Menu Timeout
- 3.4 Screen Saver
- 3.5 Pop-Up Timeout
- 3.6 Backlight Timeout
- 3.7 Date Display
- 3.8 Language

### 4 Authentication

- 4.1 Auth.
  - 4.1.1 Combination Mode (Step 1)
- 4.2 T&A
- 4.3 T&A Mode

### 5 Mode

- 5.1 Operation
  - 5.1.1 Dual Authentication
  - 5.1.2 Match Timeout
  - 5.1.3 Card Mode

### 6 Log

- 6.1 Log Info

## User



### 1 Enroll User

- 1.1 Name
- 1.2 Individual
- 1.3 Group
- 1.4 Iris & Face Process
  - 1.4.1 Face Capture
    - 1.4.1.1 Tracking Guide Box UI
  - 1.4.2 Iris Capture
    - 1.4.2.1 Tracking Guide Box UI
  - 1.4.3 Save Data / Complete Enrollment
  - 1.4.4 Complete Enrollment
- 1.5 Card
  - 1.5.1 Save Data
- 1.6 Pin
  - 1.6.1 Input
  - 1.6.2 Save Data


### 2 Search

### 3 Capacity Info


### 4 Delete



## Settings

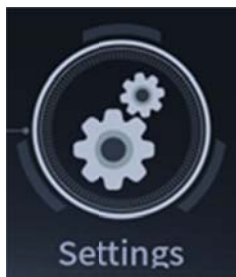


Tap the **Settings** icon in the home screen.

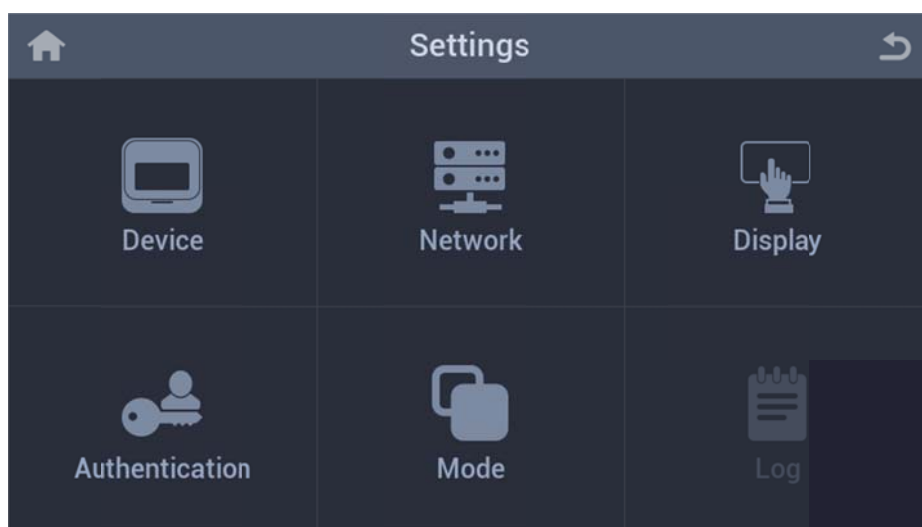

<b>Device</b>	Configuration for device operating
<b>Network</b>	Configuration for IP & serial communication
<b>Display</b>	Configuration for screen display
<b>Authentication</b>	Configuration for authentication method and T&A
<b>Mode</b>	Configuration for recognition operation
<b>Log</b>	Information of saved log and log search viewer (Note: In construction)

# 1 Device

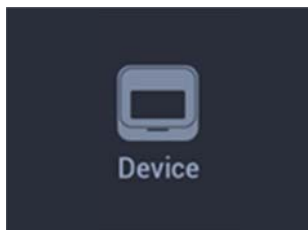

Configure settings for device operation.

## 1.1 Configuration




**User Positioning Interface** Select a guide display UI when enrollment and recognition

**Motion wait time** Set motion detection delay time from last recognition operating

**Motion detect** Select motion detection enable/disable for starting recognition

**Debug** Select Debug mode enable/disable (captures image stream for off-line analysis)

### 1.1.1 Configuration → User Positioning Interface

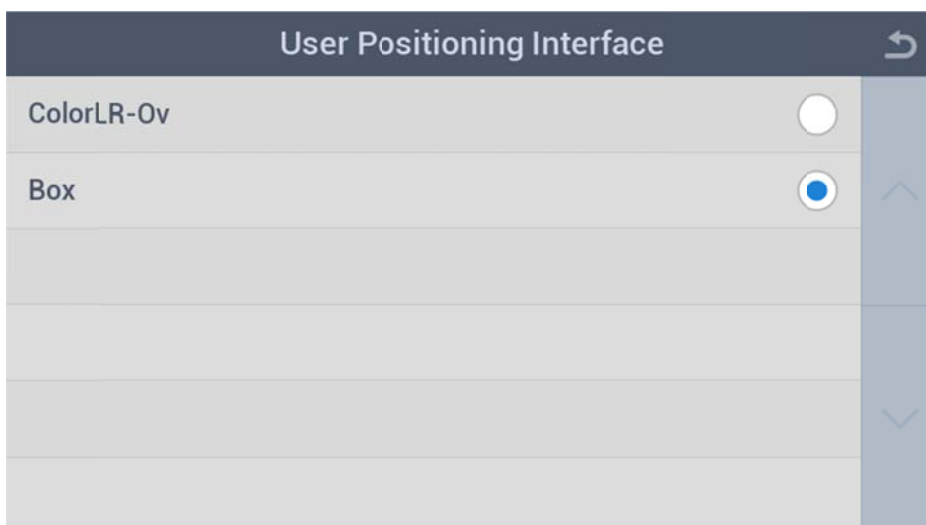


The screenshot shows a mobile application interface titled "User Positioning Interface". It features a list of two options: "ColorLR-Ov" and "Box". Each option has a corresponding radio button to its right. The "Box" option is selected, indicated by a blue dot in its radio button. To the right of the list is a vertical scrollbar with up and down arrow icons.

**ColorLR-Ov**                      Select Color overlay type guide UI display


**Box**                                Select tracking box type guide UI display

### 1.1.2 Configuration → Motion Wait Time

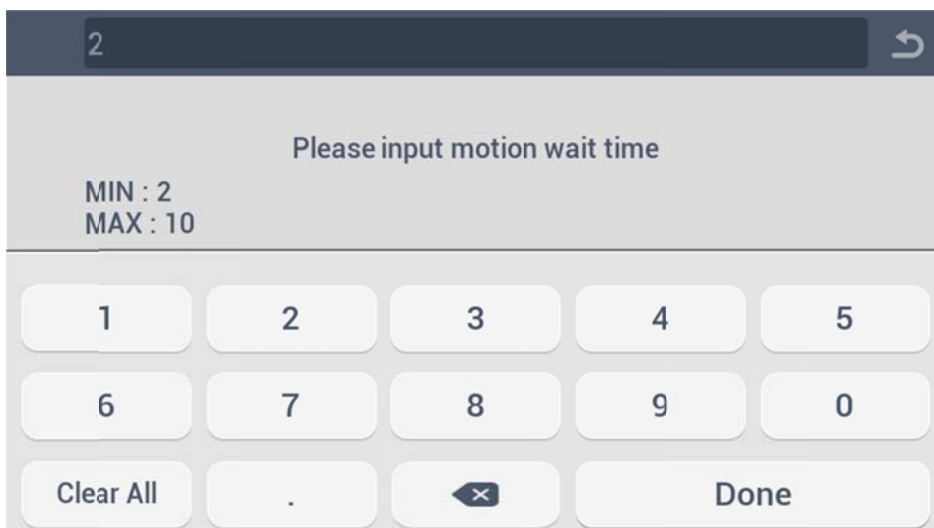

The screenshot shows a mobile application interface for inputting motion wait time. At the top, a dark header bar contains the number "2" and a back arrow icon. Below the header, the text "Please input motion wait time" is displayed. Underneath, the minimum and maximum values are shown: "MIN : 2" and "MAX : 10". The main area contains a numeric keypad with buttons for digits 1 through 0. At the bottom, there are four buttons: "Clear All", a decimal point ".", a backspace icon (arrow pointing left with an 'x'), and "Done".

## 1.2 Bio

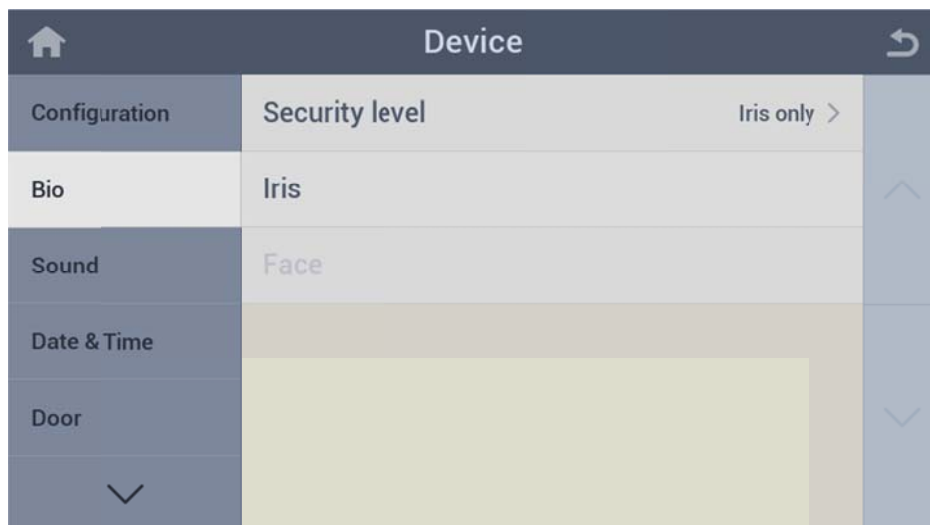

### Security Level

Select a combination mode of Face and Iris


### Iris

Additional configuration for Iris enrollment and recognition

### Face

Additional configuration for Face enrollment and recognition (note: in construction)

### 1.2.1 Bio → Security Level (Must have face recognition option)

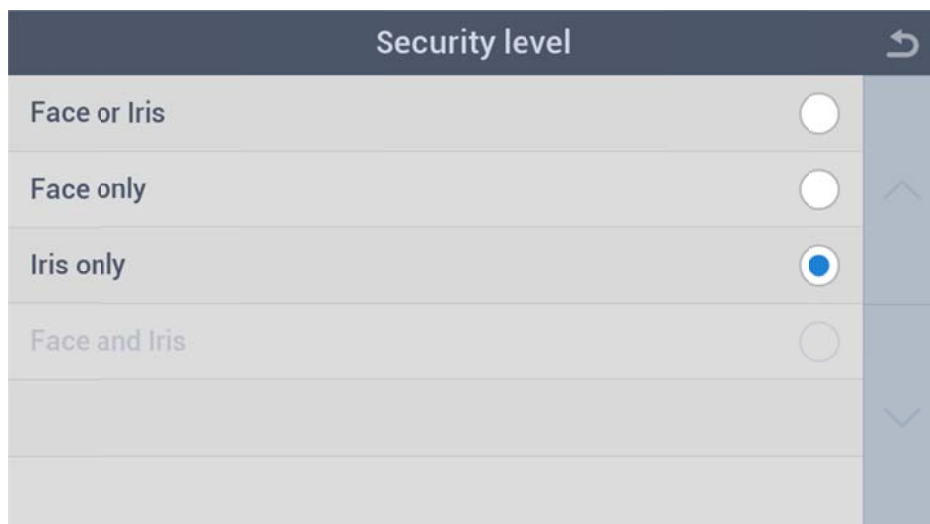

<b>Face or Iris</b>	Select 2 stage Face or Iris recognition mode (Face recognition first, and then automatic switch-over to Iris upon Face recognition non-match)
<b>Face only</b>	Select Face only recognition mode
<b>Iris only</b>	Select Iris only recognition mode
<b>Face and Iris</b>	Select 2 stage Face and Iris recognition mode (Face recognition first, and then automatic switch-over to Iris upon multiple matches) (note: in construction)

### 1.2.2 Bio → Iris



<b>Max distance</b>	Set max distance for Iris recognition
<b>Recognition either eye</b>	Select enable/disable for either eye recognition mode
<b>Enroll either eye</b>	Select enable/disable for either eye enrollment mode

### 1.2.2.1 Bio → Iris → Max Distance

45


↶

Please input maximum distance

MIN : 40  
MAX : 49

1	2	3	4	5
6	7	8	9	0
Clear All	.	⬅ ×	Done	


## 1.3 Sound

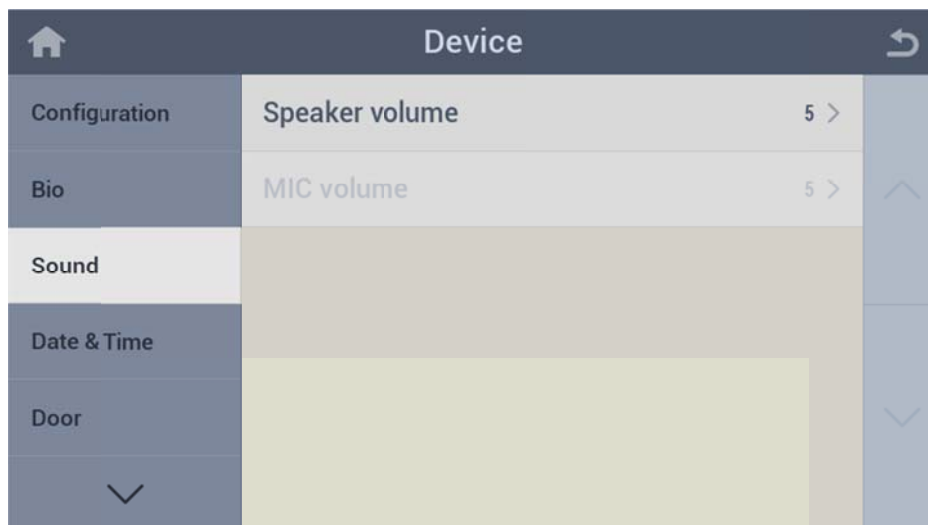

**Speaker volume** Set speaker volume for instruction sound and interphone voice

**MIC volume** Set microphone volume for interphone voice (note: in construction)


### 1.3.1 Sound → Speaker Volume

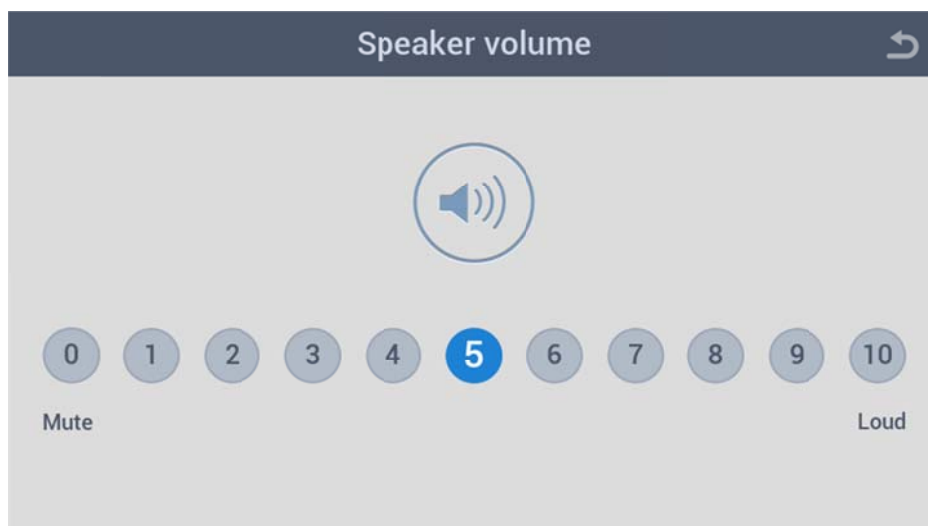

### 1.3.2 Sound → MIC Volume

Identical to settings for speaker volume


## 1.4 Date & Time

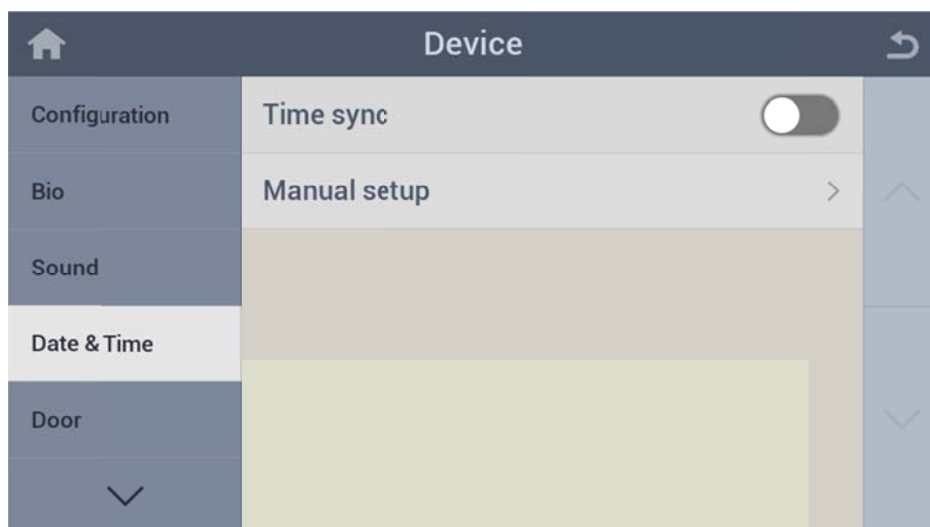

**Time sync** Select enable/disable for time sync with CMID manager

**Manual setup** Set date and time manually

### 1.4.1 Date & Time → Manual Setup

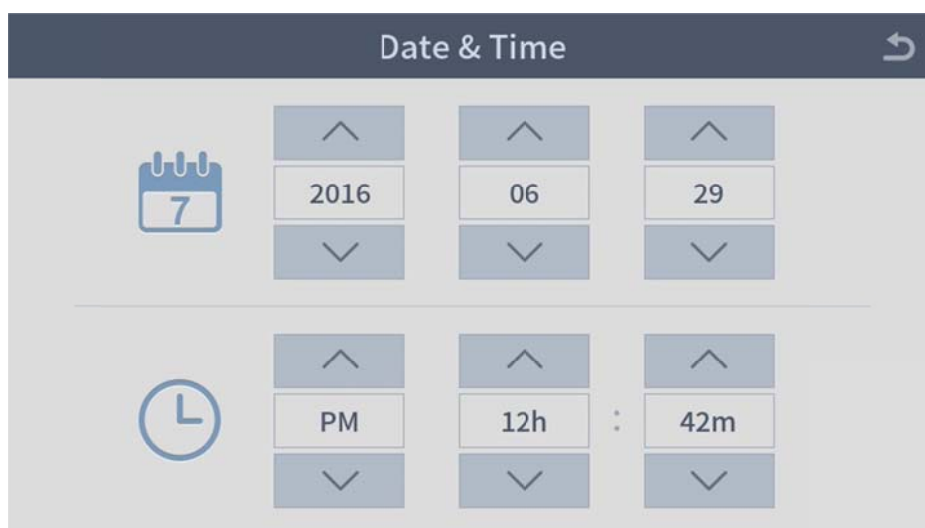



## 1.5 Door

Device			
Configuration	Relay	Not use >	^
Bio	Driven by	All Events >	
Sound	Duration(sec)	5 >	
Date & Time	RTE(Request To Exit)	Not use >	v
Door	RTE Type	N/O >	
v	Door sensor	Not use >	

**Relay** Select a door open relay

**Driven by** Select an event mode for door open relay

**Duration (sec)** Set time duration for door open relay operation

**RTE (Request to Exit)** Select a door exit button (Note: in construction)


**RTE Type** Select a door exit button operating type (Note: in construction)

**Door sensor** Select a door sensor (Note: in construction)

Device			
Configuration	Door sensor type	N/O >	^
Bio	Held open period(sec)	30 >	
Sound	Lock time	Never >	
Date & Time	Unlock time	Never >	v
Door	Tamper	<input type="checkbox"/>	
v			

<b>Door sensor type</b>	Select door sensor operating type (note: in construction)
<b>Held open period (sec)</b>	Set time duration for door open operation (note: in construction)
<b>Lock time</b>	Set door lock time (note: in construction)
<b>Unlock time</b>	Set door unlock time (note: in construction)
<b>Tamper</b>	Select enable/disable for tamper (off the wall detection) operation


### 1.5.1 Door → Relay

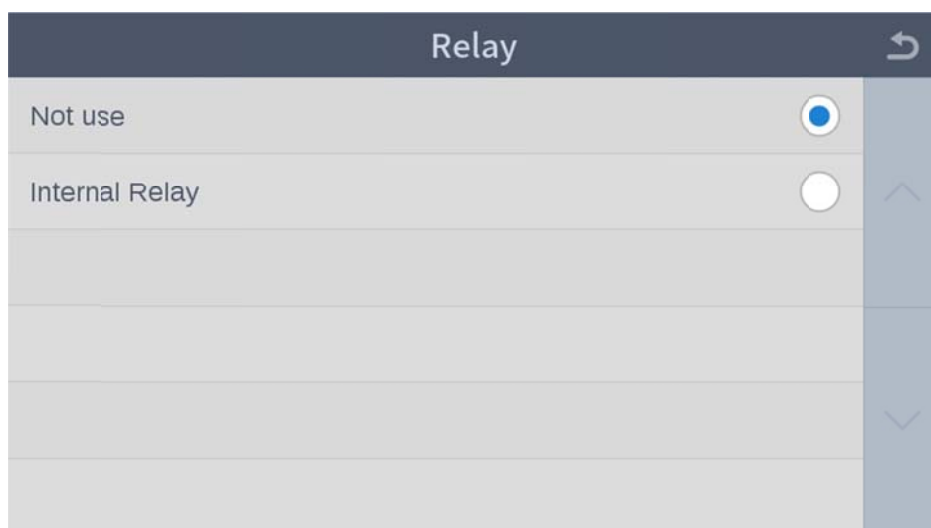

Relay	
Not use	<input checked="" type="radio"/>
Internal Relay	<input type="radio"/>

<b>Not use</b>	Select not use
<b>Internal Relay</b>	Select internal relay

### 1.5.2 Door → Driven by

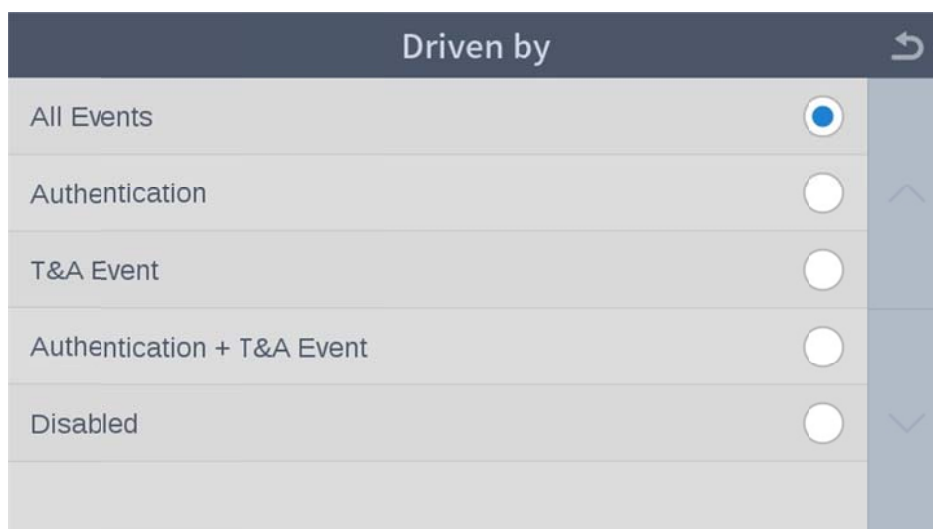

**All Events** Select door open for all events


**Authentication** Select door open for authentication event

**T&A Event** Select door open for T&A event

**Authentication + T&A Event** Select door open for authentication plus T&A event

**Disabled** Select door open disable

### 1.5.3 Door → Duration (sec)

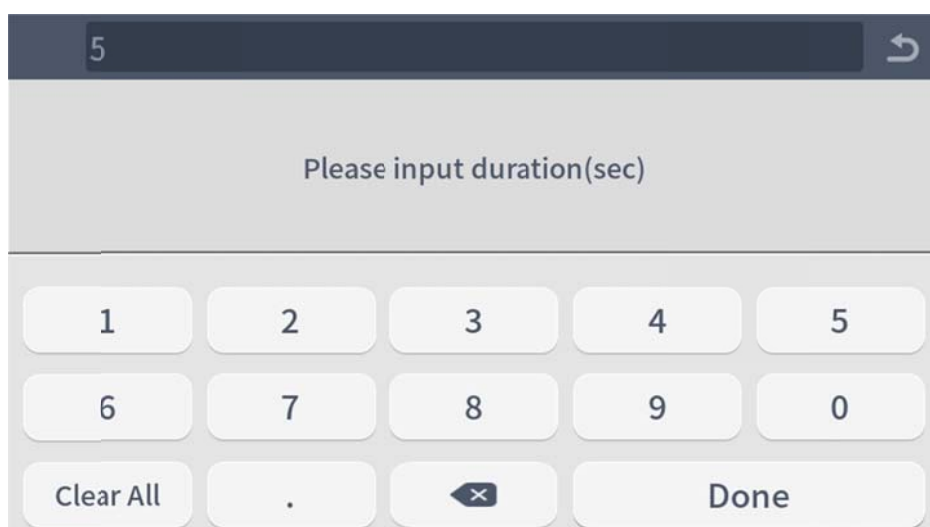

### 1.5.4 Door → Door Sensor

Door sensor	
Not use	<input checked="" type="radio"/>


### 1.5.5 Door → Door Sensor Type

Door sensor type	
N/O	<input checked="" type="radio"/>
N/C	<input type="radio"/>

**N/O**                      Select door exit button sensor as Normal Open type

**N/C**                      Select door exit button sensor as Normal Close type

### 1.5.6 Door → Held Open Period (sec)

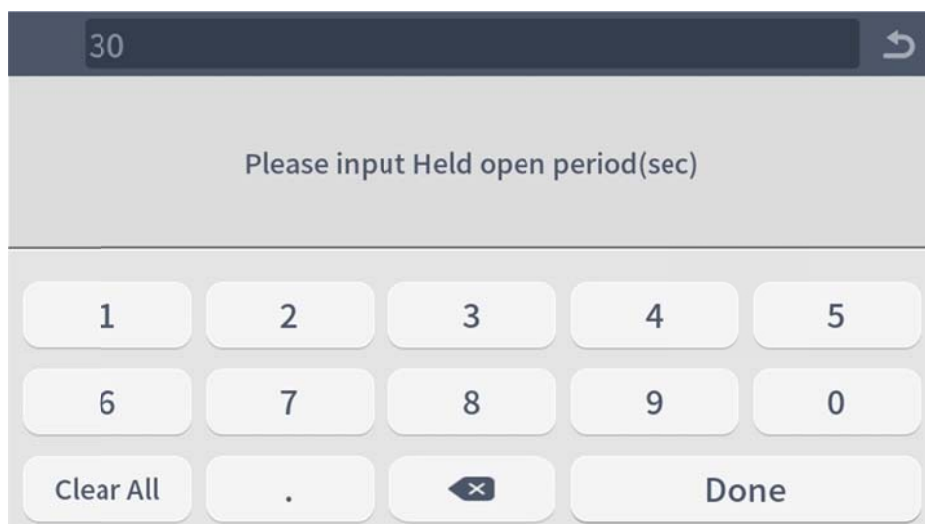

30


Please input Held open period(sec)

1 2 3 4 5

6 7 8 9 0

Clear All . Done

### 1.5.7 Door → Lock Time

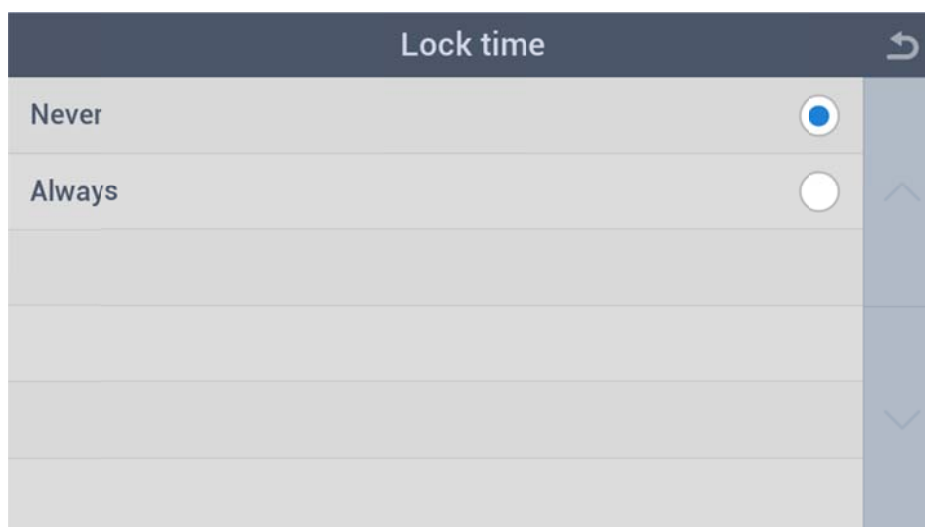

Lock time

Never ☒

Always ☐

Up Arrow

Down Arrow

**Never** Select door lock time -- never

**Always** Select door lock time -- always

### 1.5.8 Door → Unlock Time



**Never**                      Select door unlock time -- never

**Always**                     Select door unlock time -- always

## 1.6 Device Info

Device		
Model	UMX-10	
Device Info.	FW Version	umx-ota-upgrade-es_d20160707.bin
Interphone	Device ID	HC0706A000019
Memory Info.	Kernel version	1.1.7
Touchscreen Cal.	HW version	0x0201
MAC	00:25:ff:fe:47:9a	

**Model** Model name of this device

**FW Version** Version name of released firmware (F/W) file

**Device ID** Identification number of this device

**Kernel version** Revision number of kernel

**HW version** Revision number of hardware board

**MAC** MAC address of this device

Device		
Boot version	1.0.0	
Device Info.	Root version	1.1.9
Interphone	Recovery version	1.1.4
Memory Info.	Application version	1.1.11
Touchscreen Cal.	FPGA version	2.6.0

<b>Boot version</b>	Revision number of boot loader
<b>Root version</b>	Revision number of root file system
<b>Recovery version</b>	Revision number of recovery firmware
<b>Application version</b>	Revision number of Launcher application
<b>FPGA version</b>	Revision number of Camera FPGA firmware



## 1.7 Interphone



**Interphone** Select enable/disable for interphone use (note: in construction)

**IP Address** IP address of PC which interphone program is installed (note: in construction)

### 1.7.1 Interphone → IP Address




## 1.8 Memory Info



**System** Memory capacity of system area (note: in construction)


**User data** Memory capacity of user area (note: in construction)

## 1.9 Camera

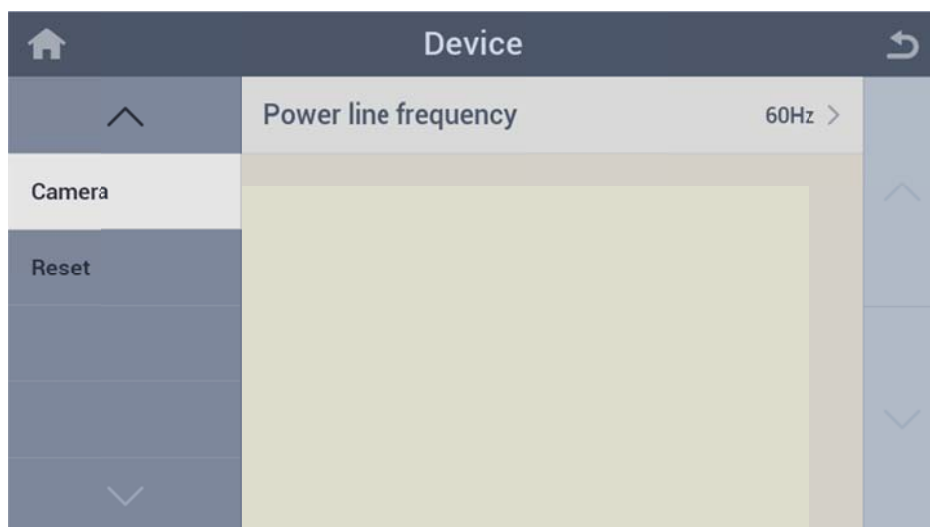

**Power line frequency**      Select power line frequency that supplying to device


### 1.9.1 Camera → Power Line Frequency

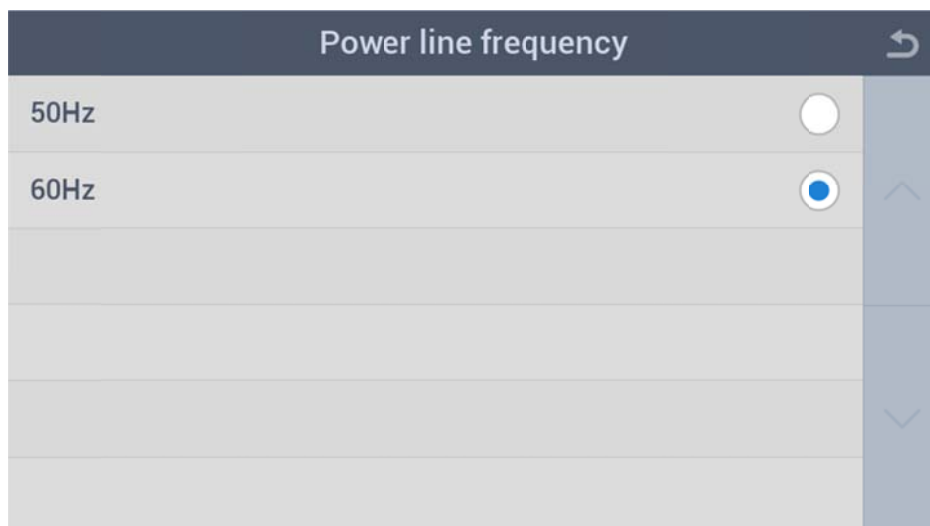

**50Hz**      Select power line frequency to 50Hz

**60Hz**      Select power line frequency to 60Hz


## 1.10 Reset

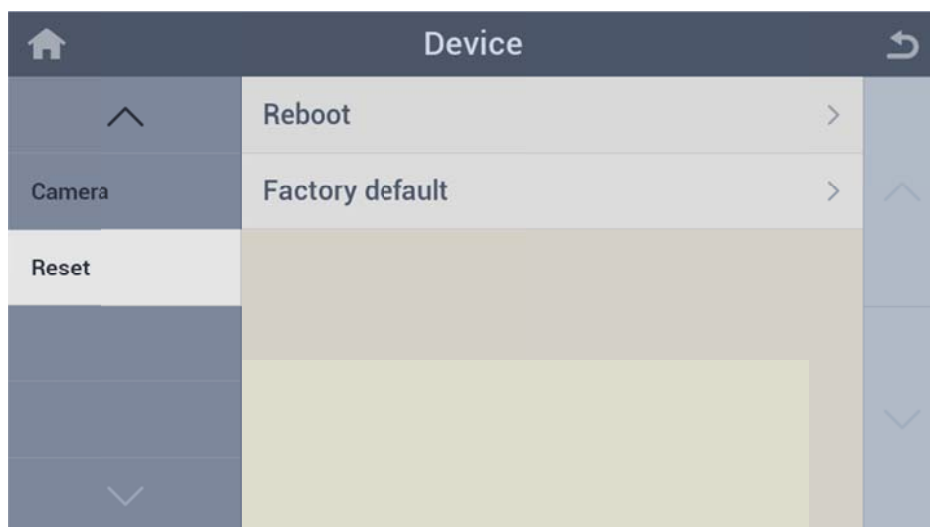

**Reboot** Reboot device

**Factory Default** Reset all configuration settings and/or delete all user data

### 1.10.1 Reset → Reboot

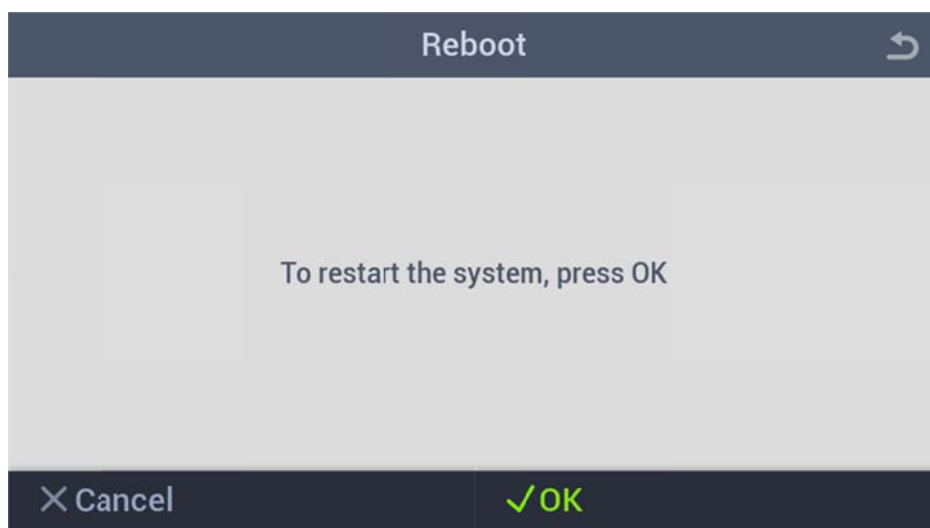

### 1.10.2 Reset → Factory Default




**Reset all settings**                      Reset all configuration settings


**Delete all data**                      Delete all user data

**Delete all data and reset all configuration settings**      Reset all configuration settings and delete all user data


#### 1.10.2.1 Reset → Factory Default → Reset All Settings

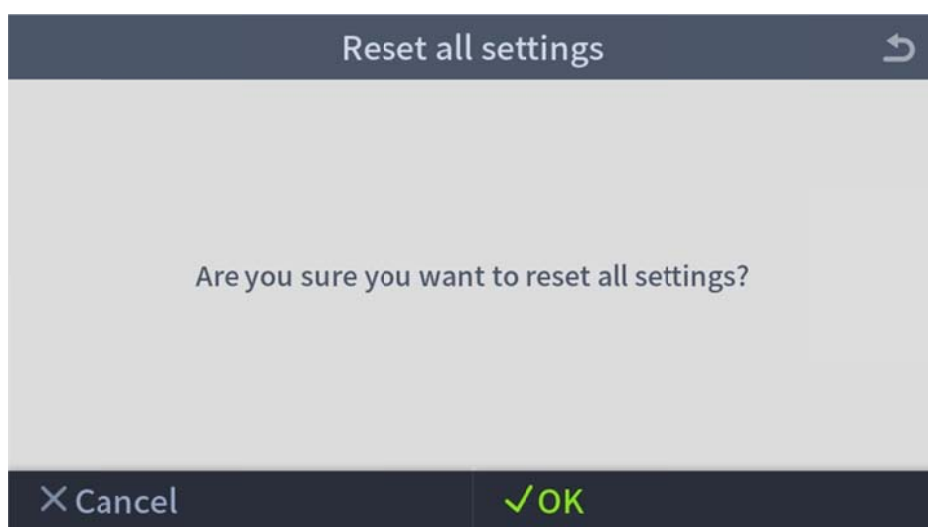


### 1.10.2.2 Reset → Factory Default → Delete All Data

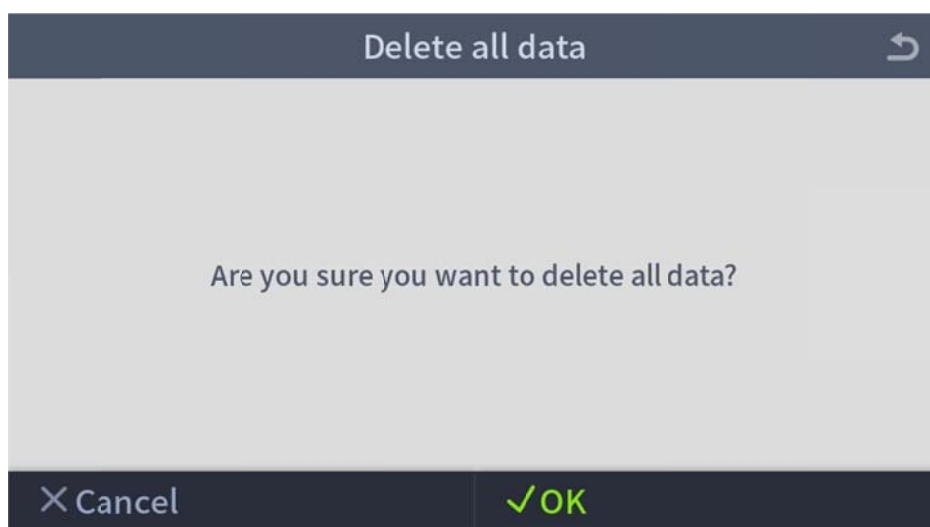

### 1.10.2.3 Reset → Factory Default → Delete All Data and Reset All Settings

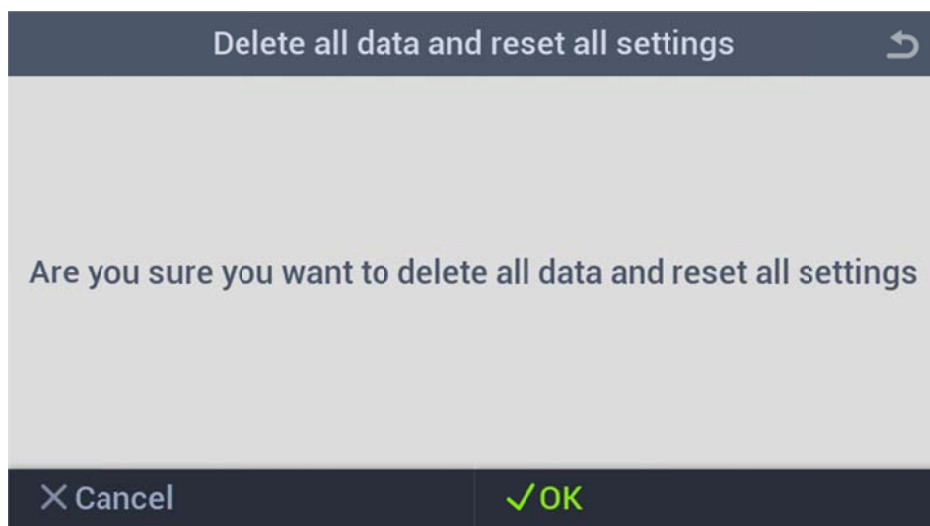

## 2 Network

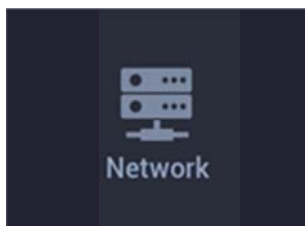

Configure settings for IP and serial communication.

### 2.1 TCP/IP

Network		
TCP/IP	Lan type	Ethernet >
Server	DHCP	<input type="checkbox"/> >
Serial	IP Address	192.168.0.7 >
USB Memory	Gateway	192.168.0.1 >
	Subnet	255.255.255.0 >

<b>LAN type</b>	Select a type of LAN
<b>DHCP</b>	Select enable/disable DHCP mode
<b>IP Address</b>	Set static IP address
<b>Gateway</b>	Set static gateway IP address
<b>Subnet</b>	Set static subnet mask

### 2.1.1 TCP/IP → LAN Type

Lan type	
Disable	<input type="radio"/>
Ethernet	<input checked="" type="radio"/>

**Disable**                      Disable LAN use

**Ethernet**                    Select Ethernet for LAN use

### 2.1.2 TCP/IP → IP Address

192.168.0.6

Please input IP address

1

2

3

4

5

6

7

8

9

0

Clear All

.

⬅

Done



### 2.1.3 TCP/IP → Gateway




192.168.0.1 ↩

Please input gateway

1	2	3	4	5
6	7	8	9	0
Clear All	.	⬅✕	Done	

### 2.1.4 TCP/IP → Subnet

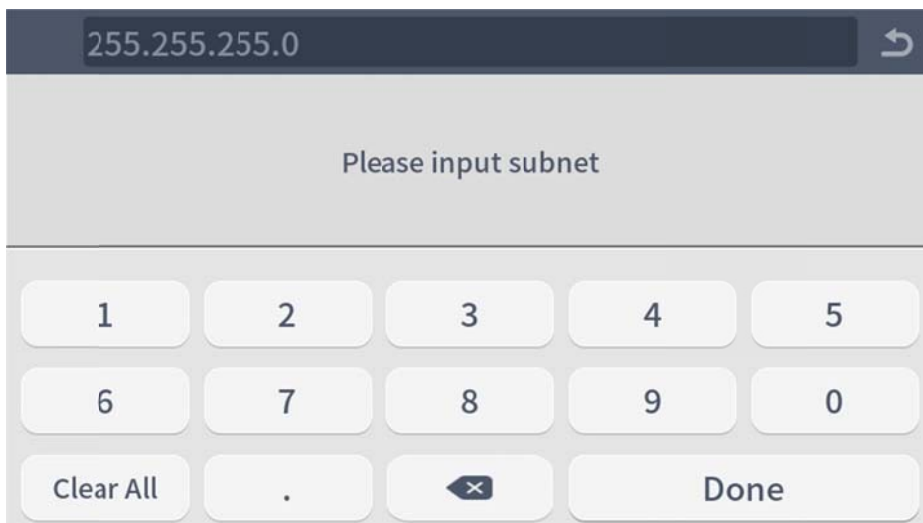


255.255.255.0 ↩

Please input subnet

1	2	3	4	5
6	7	8	9	0
Clear All	.	⬅✕	Done	

## 2.2 Server

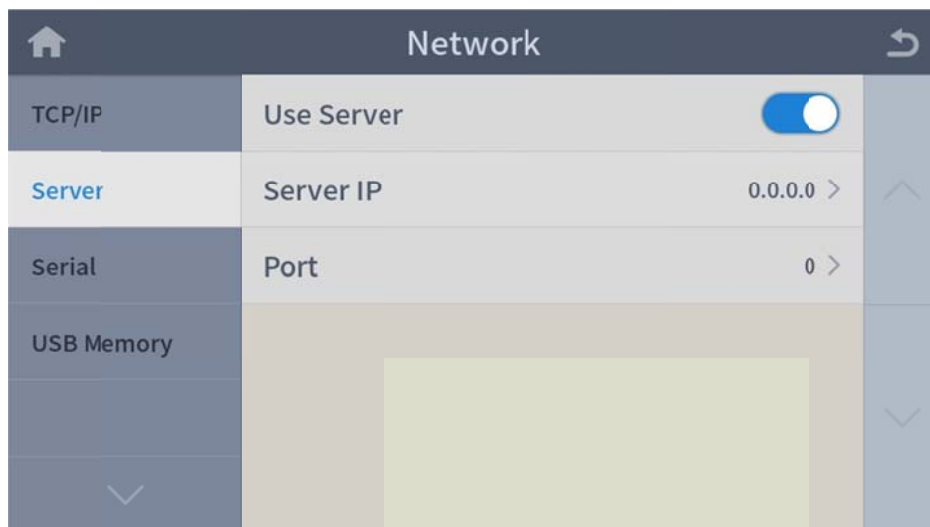

(Currently settled server is CMID PC for time sync)

**Use Server** Select enable/disable for server use (Note: In construction)


**Server IP** Set IP address of server (Note: In construction)

**Port** (Note: To be eliminated)

### 2.2.1 Server → Server IP



## 2.3 Serial

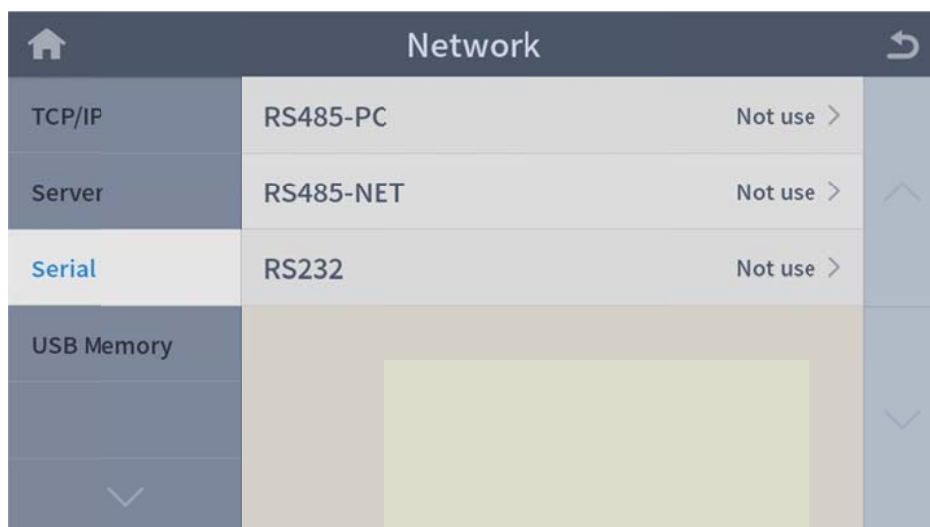


**RS485-PC** Select a baud rate for RS485 (note: in construction)

**RS485-NET** Select an operating mode for RS485 (note: in construction)

**RS232** Select a baud rate for RS232 (note: in construction)

### 2.3.1 Serial → RS485-PC

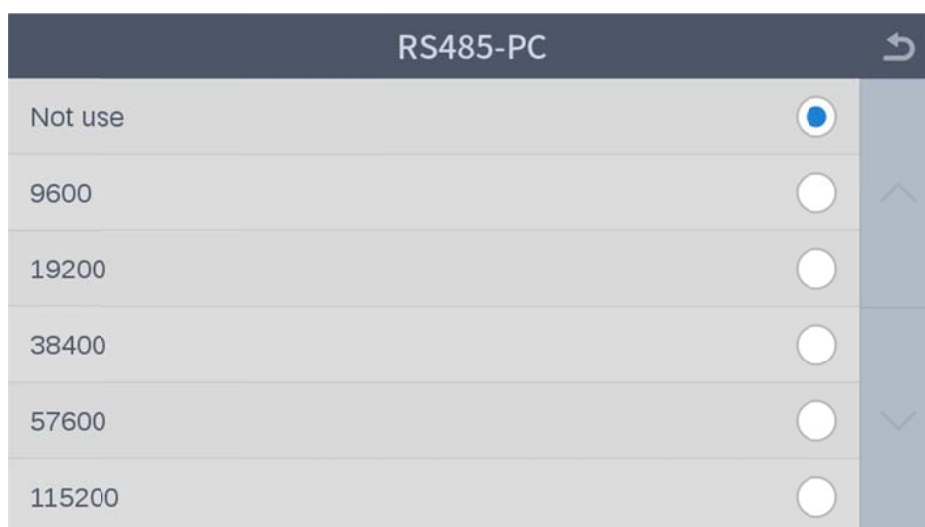

## 2.3.2 Serial → RS485-NET


RS485-NET		↶
Not use	<input checked="" type="radio"/>	↑
NET-HOST	<input type="radio"/>	
NET-SLAVE	<input type="radio"/>	
		↓

- Not use**                      Disable RS485
- NET-HOST**                Set RS485 operating mode as host
- NET-SLAVE**              Set RS485 operating mode as slave

## 2.3.3 Serial → RS232


RS232		↶
Not use	<input checked="" type="radio"/>	↑
		↓

## 2.4 USB Memory

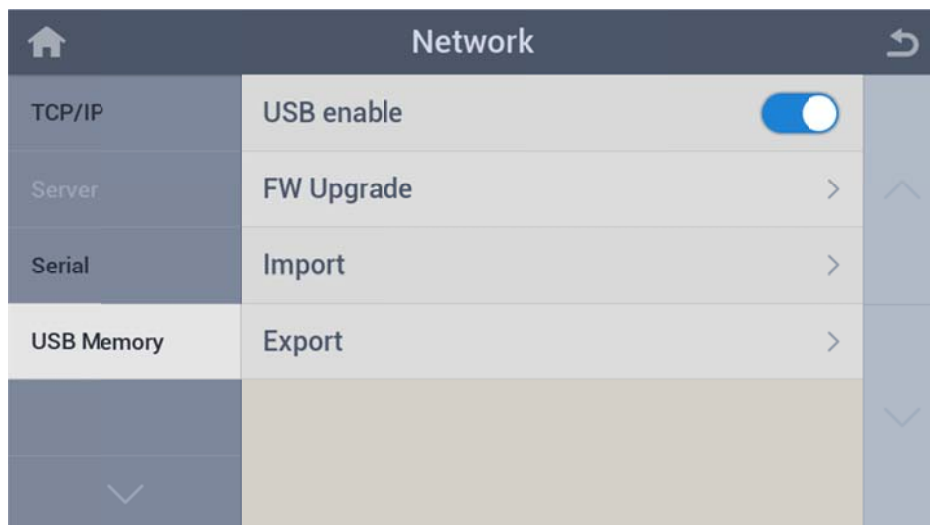


<b>USB enable</b>	Select enable/disable for USB memory use
<b>FW Upgrade</b>	Go into firmware (F/W) upgrade from USB memory
<b>Import</b>	Go into backup data (user & log data) restore from USB memory
<b>Export</b>	Go into backup data (user & log data) save to USB memory

### 2.4.1 USB Memory → FW Upgrade

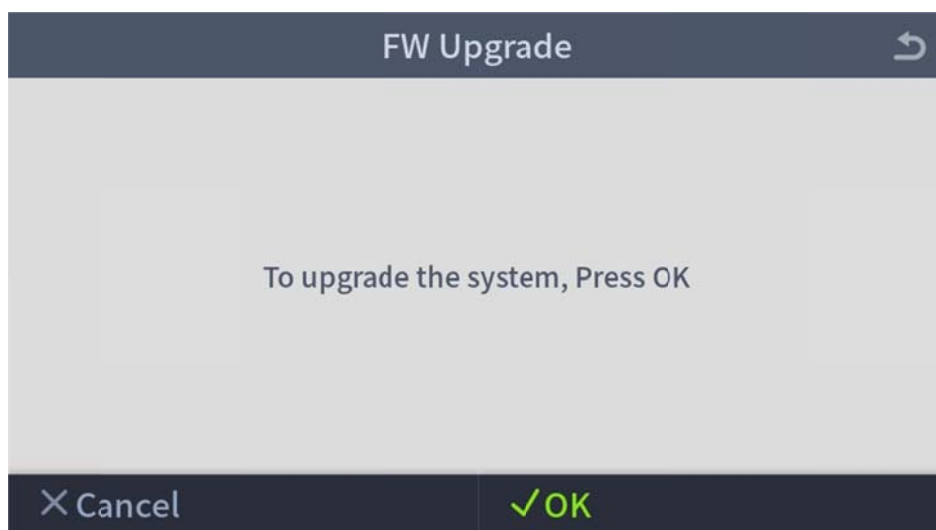


Upgrade F/W by tapping on **✓ OK** button on the bottom right.

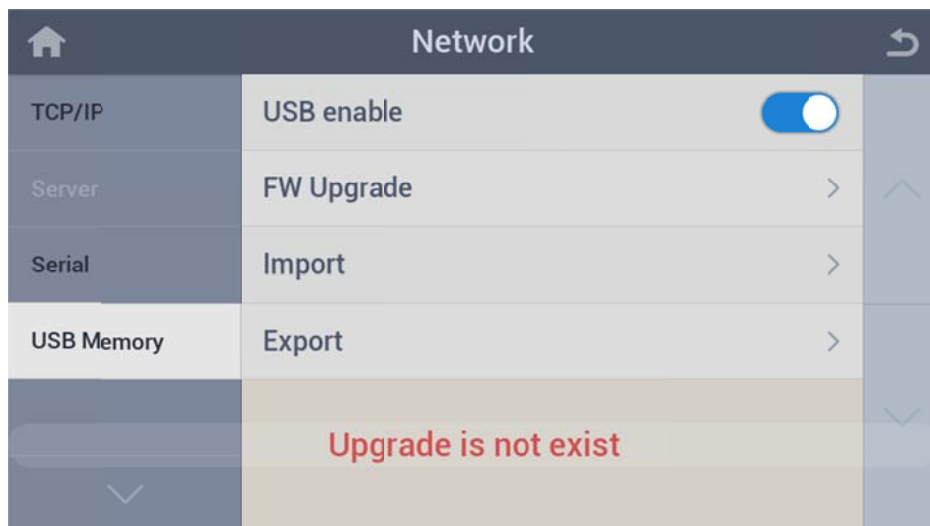

If the FW file (new firmware and operating library) does not exist in USB, message appears as shown above.


## 2.4.2 USB Memory → Import

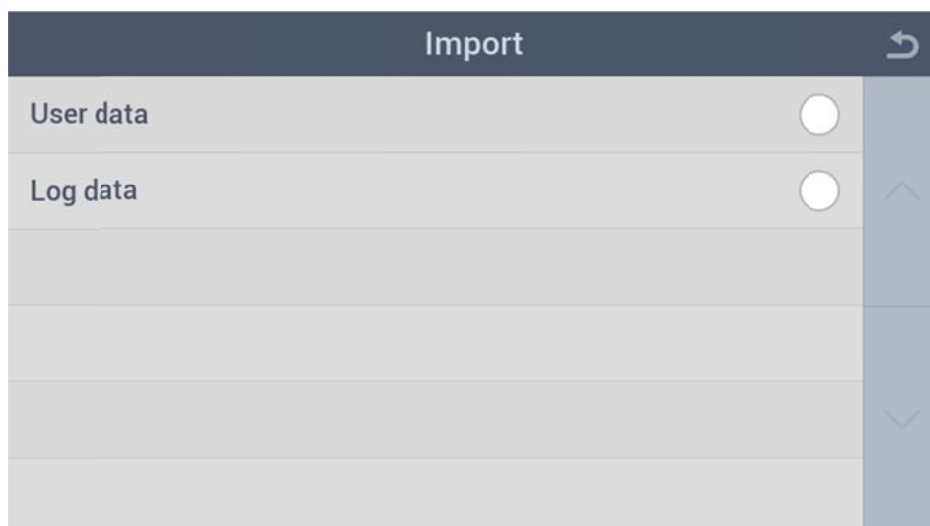

**User data** Restore user enroll data from USB memory

**Log data** Restore log data from USB memory


### 2.4.3 USB Memory → Export

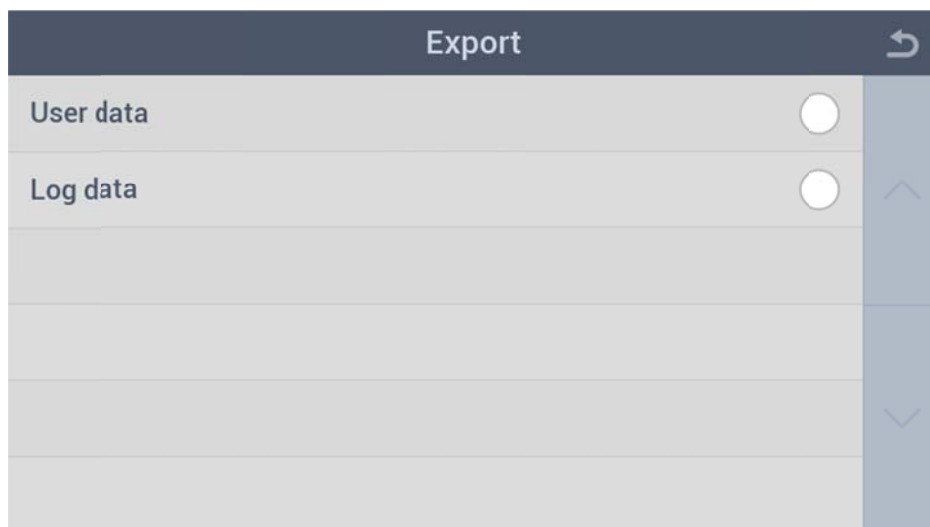

**User data**                      Backup user enroll data to USB memory


**Log data**                        Backup log data to USB memory

### 3 Display

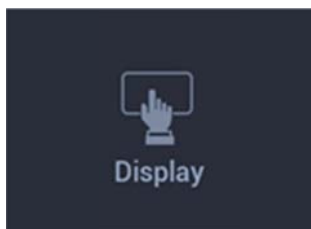

Configure settings for screen display.

#### 3.1 Voice Instructions

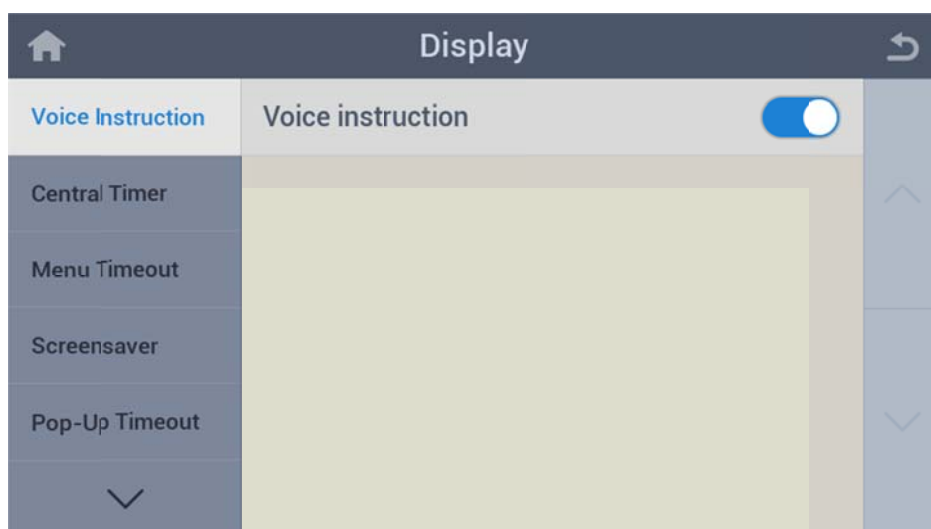


##### **Voice Instruction**

Select enable/disable for voice guide positioning / instructions




## 3.2 Central Timer

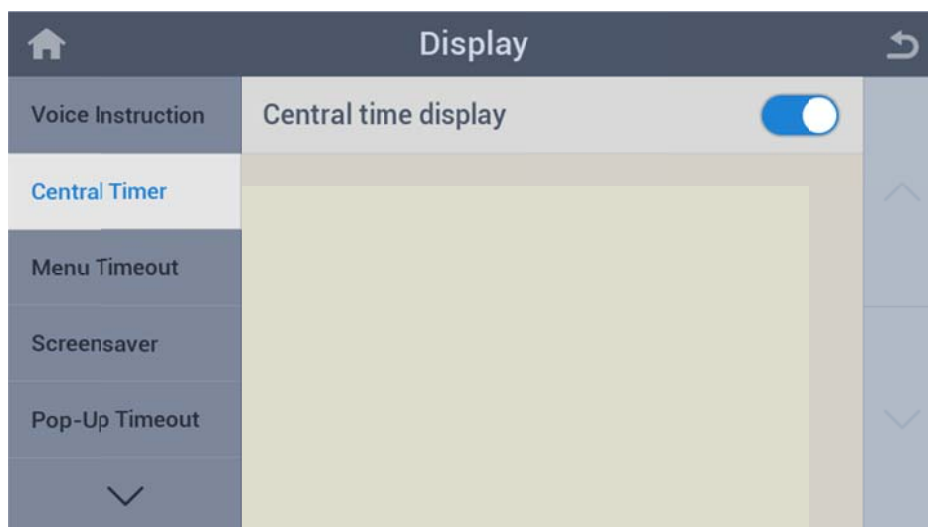


**Central Timer** Select enable/disable for clock display on the center of Launcher application

## 3.3 Menu Timeout

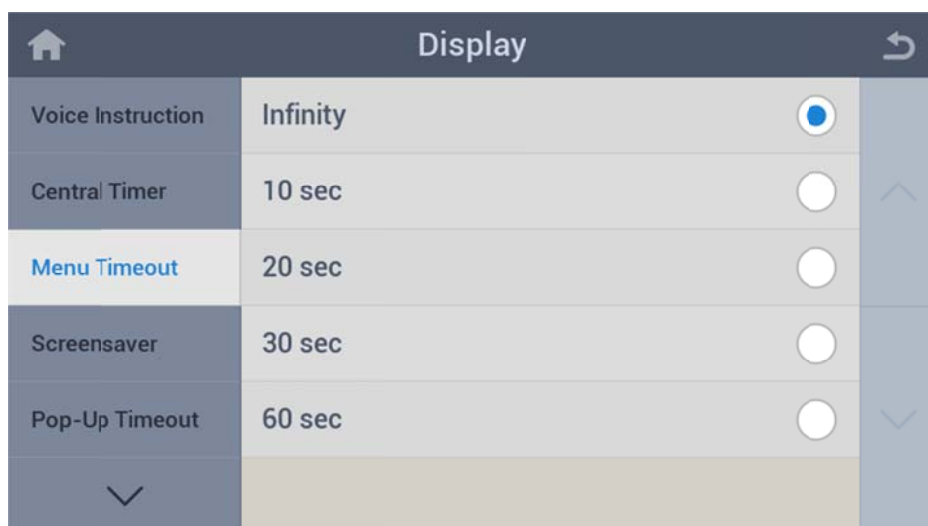

**Menu Timeout** Set timeout for auto exit from menu display after leaving untouched


### 3.4 Screensaver

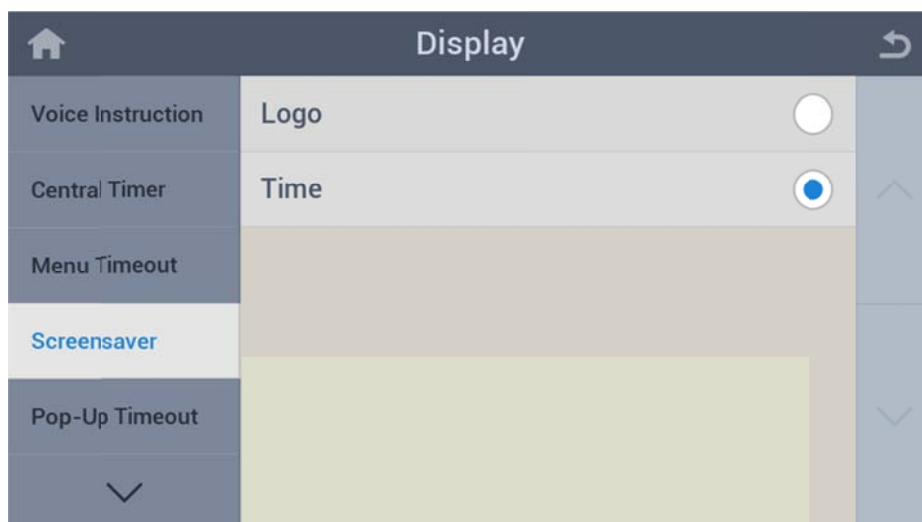

**Logo** Select logo display as screensaver

**Time** Select clock display as screensaver

### 3.5 Pop-Up Timeout

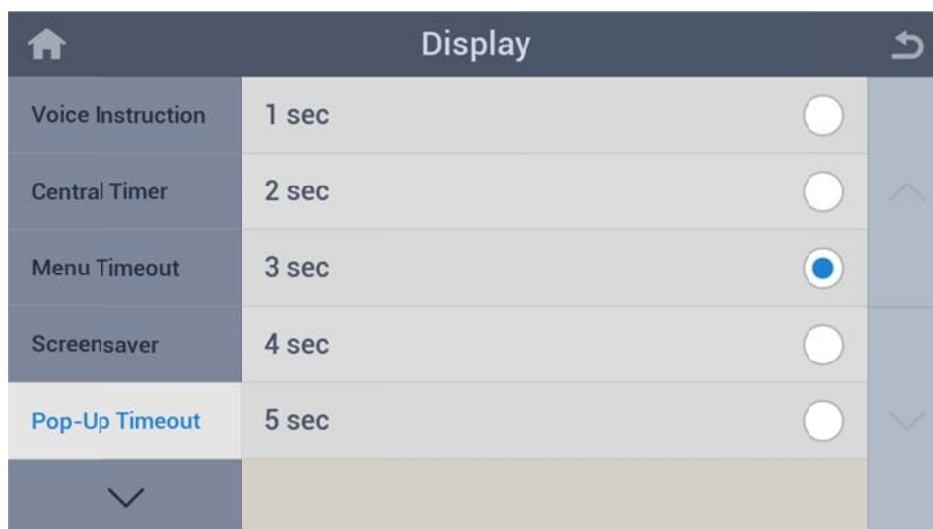


**Pop-Up Timeout** Set pop-up message window (recognition complete etc.) display duration

### 3.6 Backlight Timeout



**Pop-Up Timeout** Set timeout for auto off of LCD backlight after leaving unused


### 3.7 Date Display

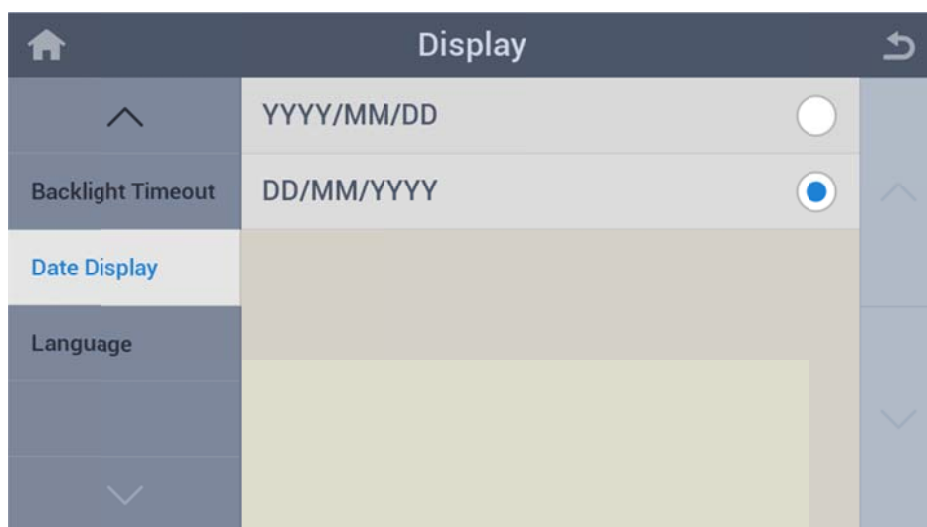

**YYYY/MM/DD** Select year/month/day display mode

**DD/MM/YYYY** Select day/month/year display mode


### 3.8 Language

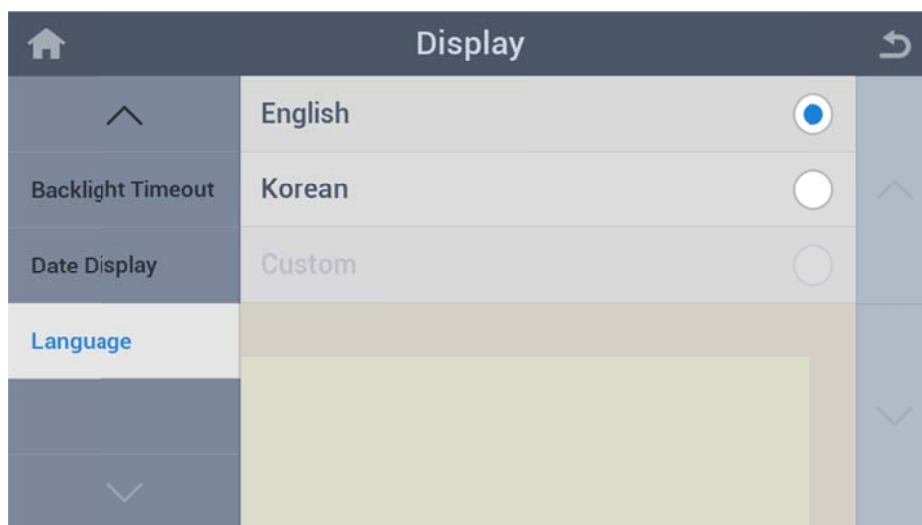

#### Language


Select a language to use (Note: In construction)

## **4 Authentication**

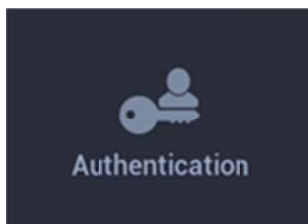

Configure settings for authentication method and T&A.

### **4.1 Auth.**

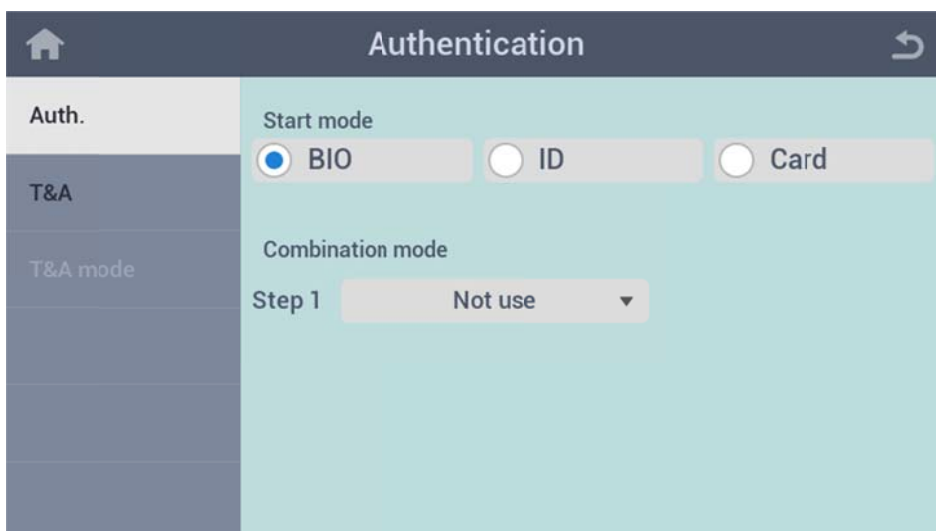 A screenshot of the "Authentication" settings page. The page has a dark blue header with a home icon, the title "Authentication", and a refresh icon. On the left is a sidebar with four items: "Auth." (selected), "T&A", "T&A mode", and an empty item. The main content area is light blue and contains two sections. The "Start mode" section has three radio buttons: "BIO" (selected), "ID", and "Card". The "Combination mode" section has a label "Step 1" followed by a dropdown menu currently showing "Not use".

**Start mode**                      Select a basic (first) recognition method

**Combination mode**              Select a combination (additional) recognition method if necessary

### 4.1.1 Auth. → Combination Mode (Step 1)

Step 1		↩
Not use	<input checked="" type="radio"/>	^ v
Bio	<input type="radio"/>	
ID	<input type="radio"/>	
Card	<input type="radio"/>	
PIN	<input type="radio"/>	

Select a combination (additional) recognition method.

## 4.2 T&A

Authentication		↩
Auth.	Use T&A	<input checked="" type="checkbox"/>
T&A	T&A > Recognition	<input type="radio"/>
T&A mode	Recognition > T&A	<input type="radio"/>

**Use T&A** Select enable/disable for T&A usage mode (note: in construction)


**T&A > Recognition** Select T&A mode (Attendance etc.) first, then recognition

**Recognition > T&A** After recognition, then input T&A mode (Attendance etc.)

## **4.3 T&A Mode**

(Note: In construction)

## 5 Mode

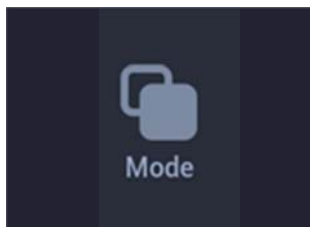

Configure settings for recognition operation.

### 5.1 Operation

Mode		
Operation	Face detection	<input type="checkbox"/>
Camera Event	Individual auth.	<input type="checkbox"/>
	Dual authentication	Never >
	Match timeout	5 sec >
	Card mode	Use CSN >

<b>Face detection</b>	Select enable/disable for face image saving at recognition (note: to be eliminated)
<b>Individual auth.</b>	Select enable/disable for permission of individual authentication
<b>Dual authentication</b>	Select a dual authentication (simultaneous 2 persons) method (note: in construction)
<b>Match timeout</b>	Set a recognition trying timeout
<b>Card mode</b>	Select use or not for CSN in RFID card (note: in construction)



### 5.1.1 Operation → Dual Authentication

Dual authentication		↶
Never	<input checked="" type="radio"/>	^
Always	<input type="radio"/>	
		v


### 5.1.2 Operation → Match Timeout

Match timeout		↶
3 sec	<input type="radio"/>	^
5 sec	<input checked="" type="radio"/>	
10 sec	<input type="radio"/>	
20 sec	<input type="radio"/>	v
30 sec	<input type="radio"/>	
60 sec	<input type="radio"/>	

### 5.1.3 Operation → Card Mode

Card mode		↶
Not use	<input type="radio"/>	↑
Use CSN	<input checked="" type="radio"/>	
		↓

## **6 Log**

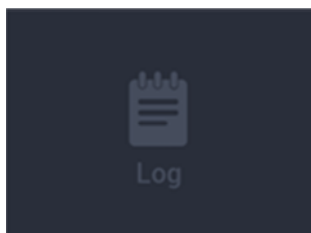


View information of saved log and log search viewer.

### **6.1 Log Info**




(Note: In construction)

## User

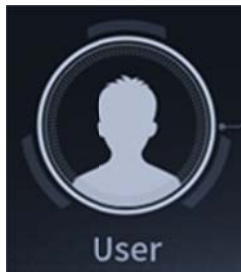


Tap the **User** icon in Home screen.

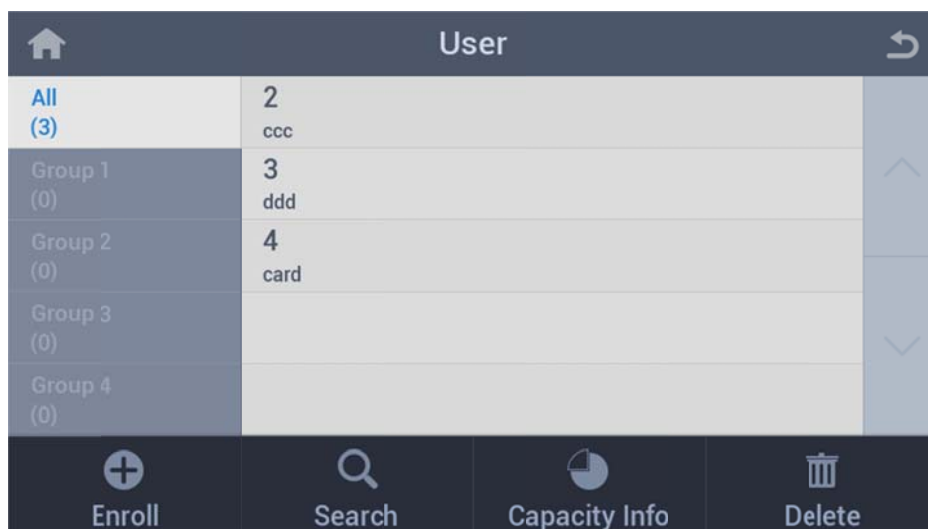


**Displays the registered user lists in All and Group 1, 2, 3, 4**

- |                             |                                 |
|-----------------------------|---------------------------------|
| <b>Enroll button</b>        | Switch to enroll process        |
| <b>Search button</b>        | Switch to search process        |
| <b>Capacity Info button</b> | Show the used memory percentage |
| <b>Delete button</b>        | Switch to delete process        |

## 1 Enroll User



Tap the **Enroll** button to enroll a new user.

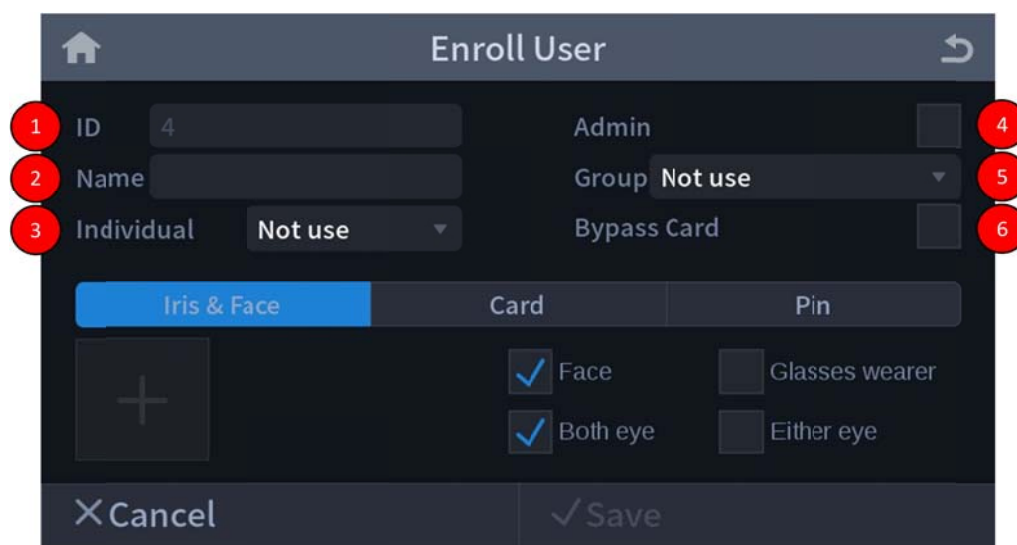

The screenshot shows the 'Enroll User' page with the following fields and options:

- 1 ID:** A text field containing the number '4'.
- 2 Name:** A text field for the user's name.
- 3 Individual:** A dropdown menu currently set to 'Not use'.
- 4 Admin:** A checkbox to make the user an administrator.
- 5 Group:** A dropdown menu currently set to 'Not use'.
- 6 Bypass Card:** A checkbox to allow bypassing the card.

Below these fields are three tabs: 'Iris & Face' (selected), 'Card', and 'Pin'. Under the 'Iris & Face' tab, there is a large plus icon for scanning and two checked options: 'Face' and 'Both eye'. There are also two unchecked options: 'Glasses wearer' and 'Either eye'. At the bottom are 'Cancel' and 'Save' buttons.

Enroll User Page

- ① ID: Created a user ID number automatically or input manually
- ② Name: Input user name manually
- ③ Individual: Set user individual authentication mode if necessary
- ④ Admin: Can make a user administrator or not
- ⑤ Group: Can make a user belong to a group
- ⑥ Bypass Card: Can register a user who holding bypass card (highest priority card)

## 1.1 Name

Please input user name

q w e r t y u i o p  
a s d f g h j k l  
↑ z x c v b n m ✕  
ABC ,?123 Space . Done


## 1.2 Individual

Individual mode

Not use	<input checked="" type="radio"/>
Bio only	<input type="radio"/>
Bio and ID	<input type="radio"/>
Bio and Card	<input type="radio"/>
Bio and PIN	<input type="radio"/>
ID only	<input type="radio"/>

Select an individual authentication mode.


## 1.3 Group

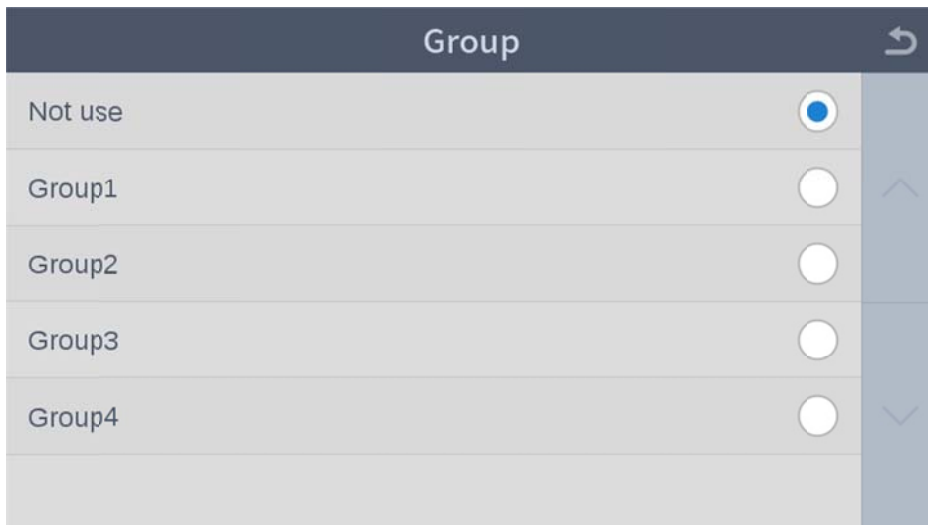

The 'Group' selection screen displays a list of groups with radio buttons for selection. The 'Not use' option is currently selected.

Group	Selected
Not use	<input checked="" type="radio"/>
Group1	<input type="radio"/>
Group2	<input type="radio"/>
Group3	<input type="radio"/>
Group4	<input type="radio"/>

## 1.4 Iris & Face Process

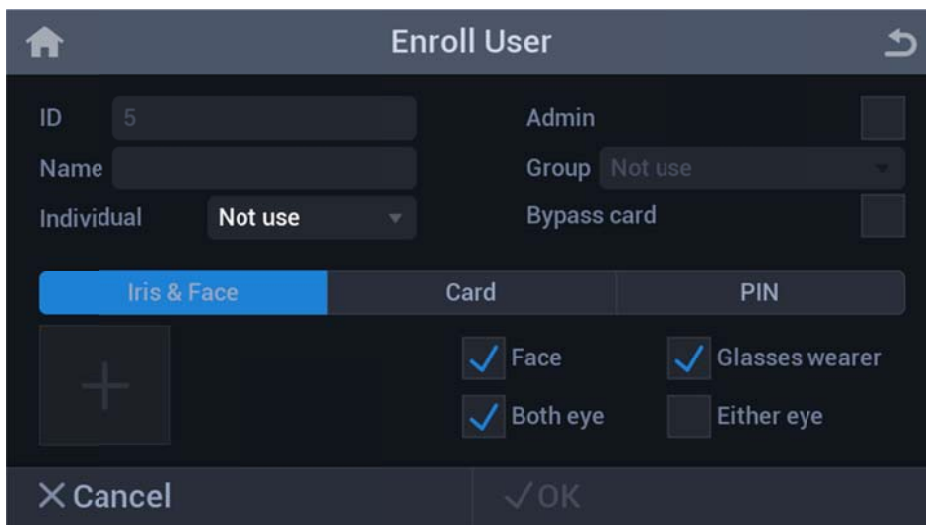

The 'Enroll User' screen shows fields for user information and enrollment options. The 'Iris & Face' tab is selected.

**Fields:**

- ID: 5
- Name:
- Individual: Not use
- Admin: ☐
- Group: Not use
- Bypass card: ☐

**Enrollment Options:**

- Iris & Face (Selected):**
  - ☒ Face
  - ☒ Both eye
  - ☒ Glasses wearer
  - ☐ Either eye
- Card:**
- PIN:**

**Buttons:** X Cancel, ✓ OK

### Iris & Face tab

Selection changes tab to blue color

Bio select check boxes are shown

### Face

Select box for face image capture

### Glasses wearer

Select box for face taking off glasses additionally if necessary

<b>Both eye</b>	Select box for "both eye" Iris mode
<b>Either eye</b>	Select box for "either eye" Iris mode
<b>Start(+) button</b>	Switch to enroll process

#### 1.4.1 Iris & Face Process → Face Capture




※ **Note: Only operational if "Combined Face and Iris" mode is active**


<b>Color Overlay</b>	BLUE means too far GREEN means OK RED means too close.
<b>Up/Down Arrow</b>	Can tilt camera manually if necessary (note: to be eliminated)
<b>Switch to Iris Capture stage after good face image acquisition</b>	




#### 1.4.1.1 Iris & Face Process → Face Capture → Tracking Guide Box UI

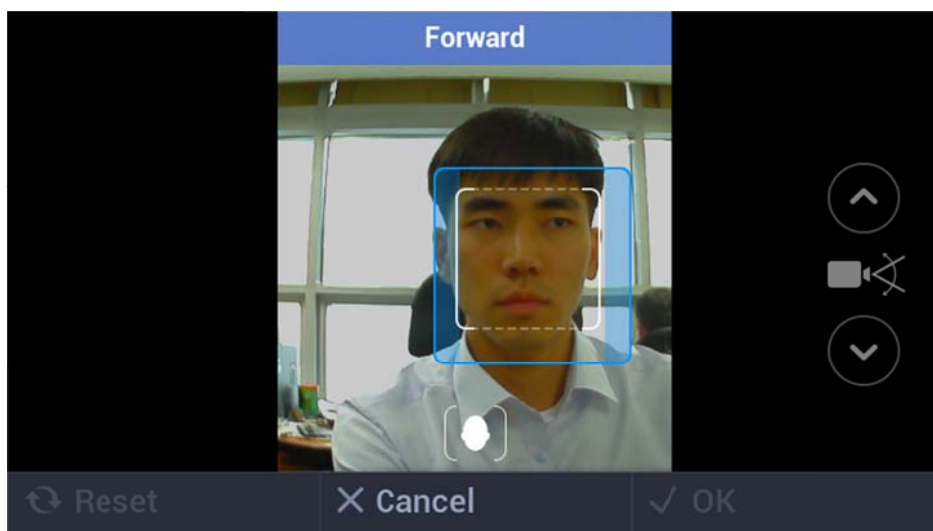


Positioning box appears in order to guide subject.

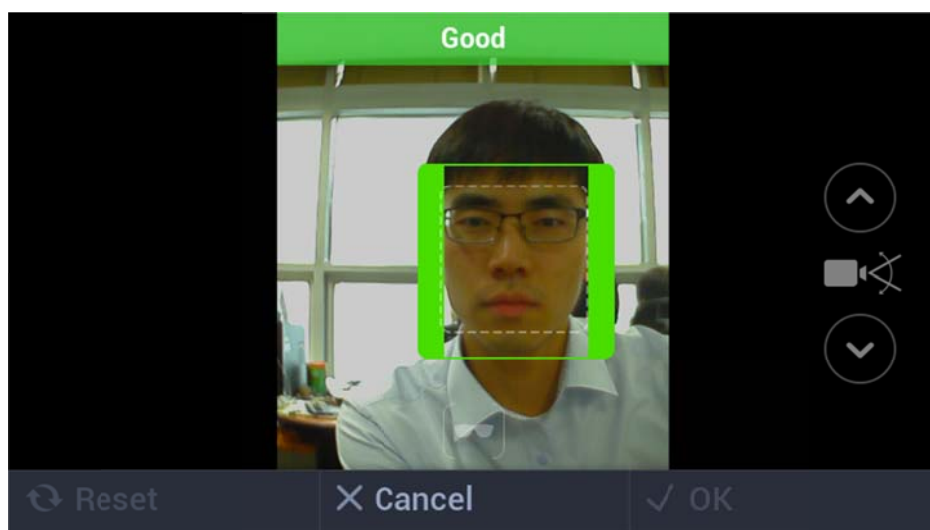

Capture normal face images.

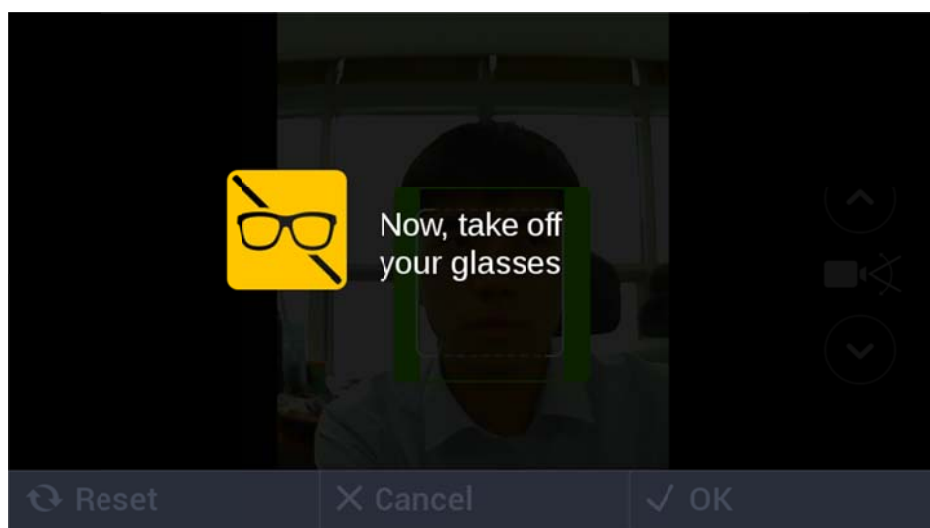


In case of selection of Glasses wearer check box, will be active for about 3 to 5 seconds.

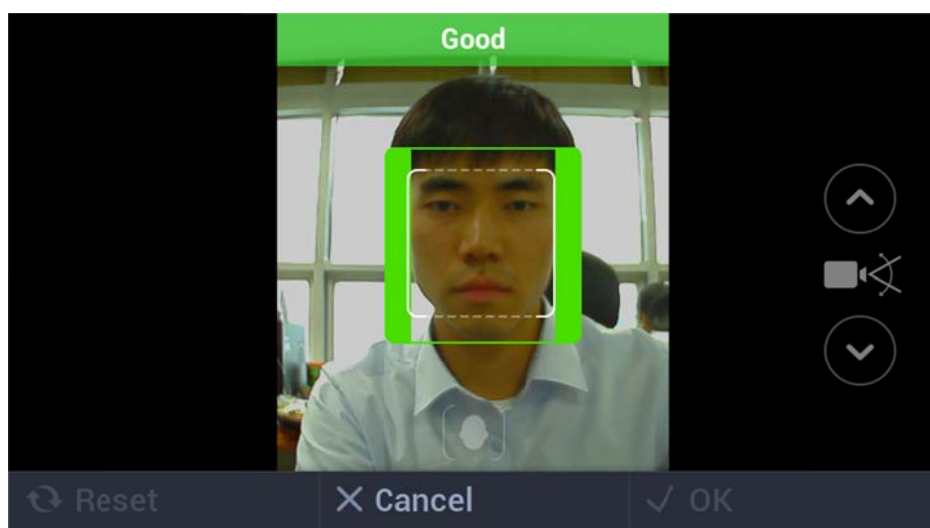


Capture additional face images taken off glasses.

## 1.4.2 Iris & Face Process → Iris Capture

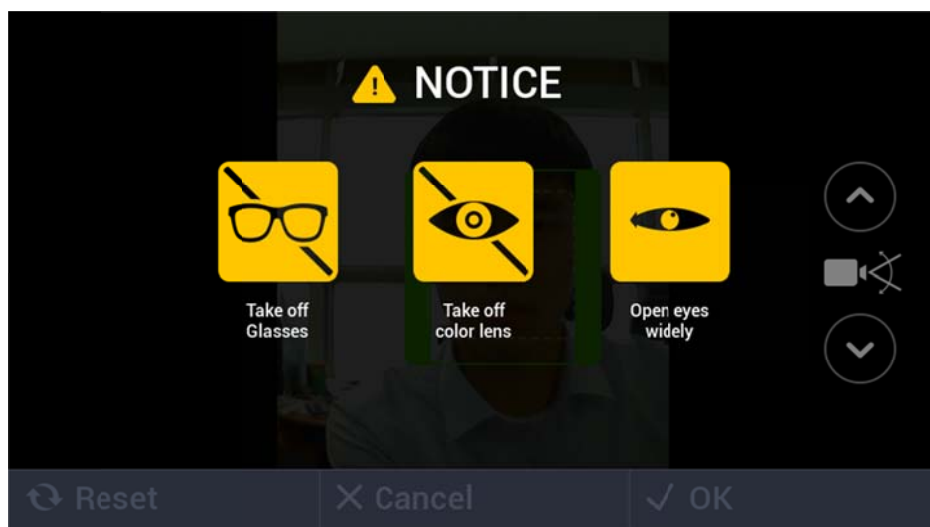


In case of Tracking Guide Box UI mode, display will be active for about 3 to 5 seconds.

### 1.4.2.1 Iris & Face Process → Iris Capture → Tracking Guide Box UI

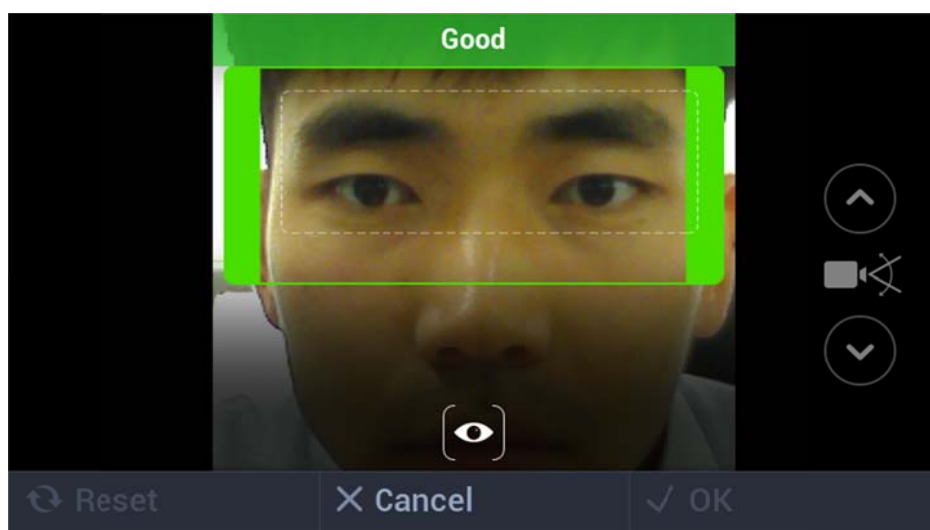


Capture iris images.

### 1.4.3 Iris & Face Process → Save Data / Complete Enrollment

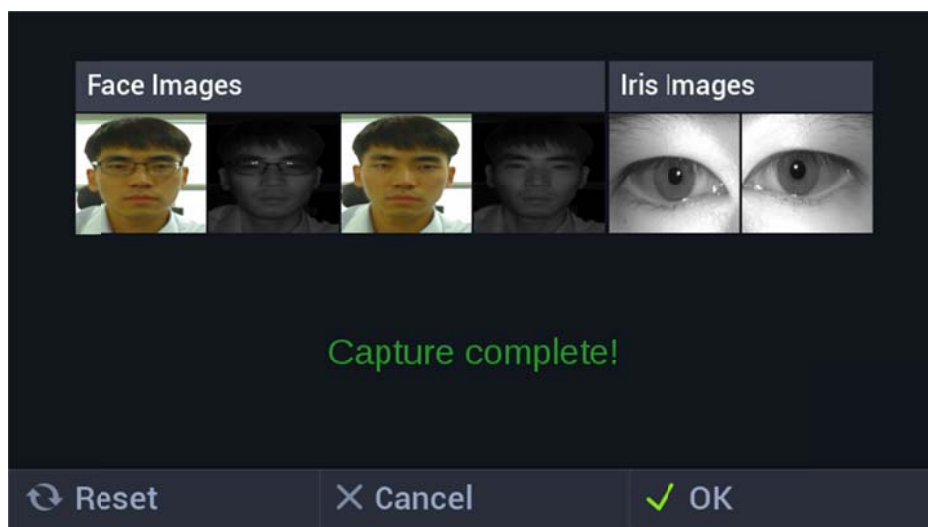

- Reset**                      Return to face capture stage
- Cancel**                    Return to Enroll User screen
- OK**                        Move to next screen to complete enrollment


### 1.4.4 Iris & Face Process → Complete Enrollment

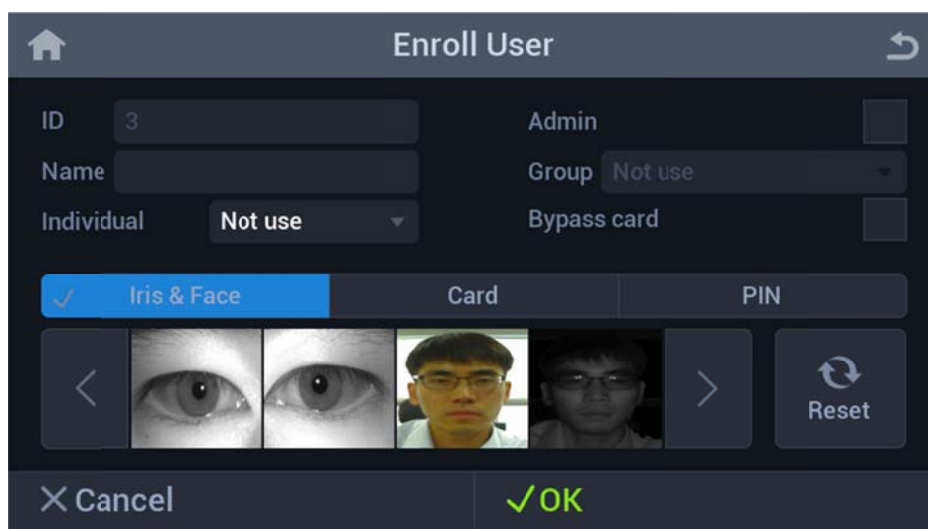

- Cancel**                      Return to User Main screen

**OK** Save user data to complete biometrics Enrollment, then return to User Main screen

## 1.5 Card

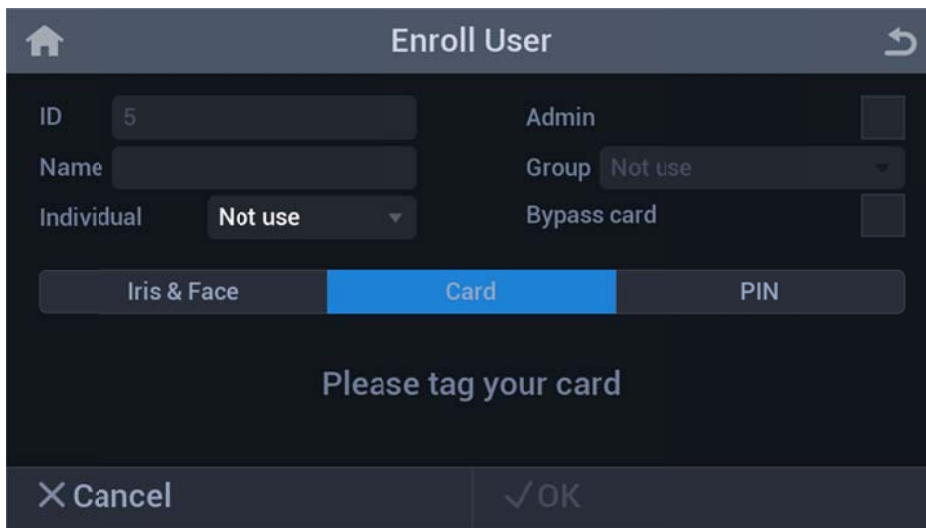


The screenshot shows the 'Enroll User' screen. At the top, there is a home icon and a back arrow. The title is 'Enroll User'. Below the title, there are input fields for 'ID' (value: 5), 'Name', 'Individual' (dropdown: Not use), 'Admin' (checkbox), 'Group' (dropdown: Not use), and 'Bypass card' (checkbox). Below these fields are three tabs: 'Iris & Face', 'Card' (highlighted in blue), and 'PIN'. Below the tabs, the text 'Please tag your card' is displayed. At the bottom, there are two buttons: 'X Cancel' and '✓ OK'.

**Card tab** Selection changes tab to blue color

If "Please tag your card" message appears, touch front-bottom part of device with user card.

### 1.5.1 Card → Save Data

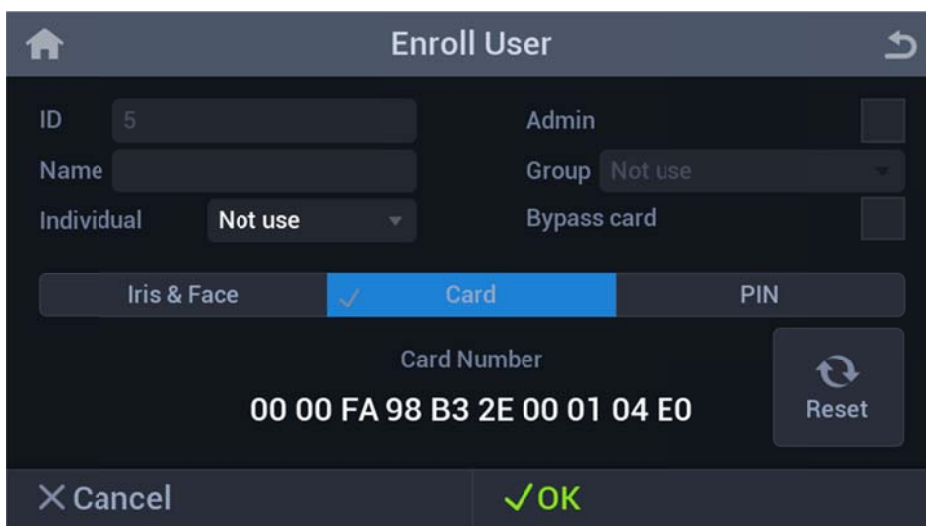


The screenshot shows the 'Enroll User' screen with the 'Card' tab selected. Below the tabs, the text 'Card Number' is displayed above the value '00 00 FA 98 B3 2E 00 01 04 E0'. To the right of the card number is a 'Reset' button with a circular arrow icon. At the bottom, there are two buttons: 'X Cancel' and '✓ OK'.

Card number is shown on tagging a card

<b>Reset</b>	Clear card number and "Please tag your card" message is shown
<b>Cancel</b>	Return to User Main screen
<b>OK</b>	Save user data and return to User Main screen

## 1.6 Pin

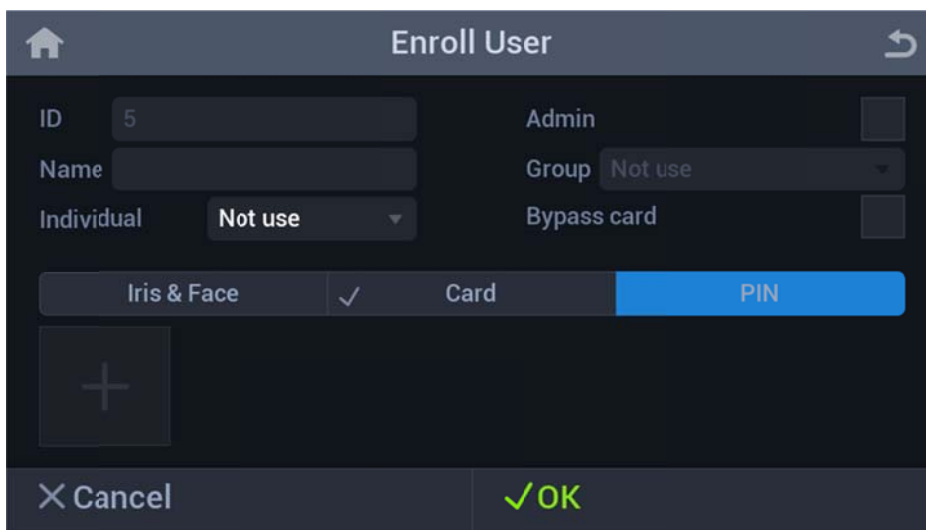


The screenshot shows the 'Enroll User' screen. At the top, there is a header bar with a home icon, the title 'Enroll User', and a refresh icon. Below the header, there are several input fields: 'ID' with the value '5', 'Name' (empty), 'Individual' with a dropdown menu showing 'Not use', 'Admin' (checkbox), 'Group' with a dropdown menu showing 'Not use', and 'Bypass card' (checkbox). Below these fields, there are three tabs: 'Iris & Face' (with a checkmark), 'Card', and 'PIN' (highlighted in blue). Below the tabs, there is a large square button with a plus sign. At the bottom, there are two buttons: 'X Cancel' and '✓ OK'.

<b>PIN tab</b>	Selection changes tab to blue color
<b>Start (+) button</b>	Switch to input screen

### 1.6.1 Pin → Input



### 1.6.2 Pin → Save Data

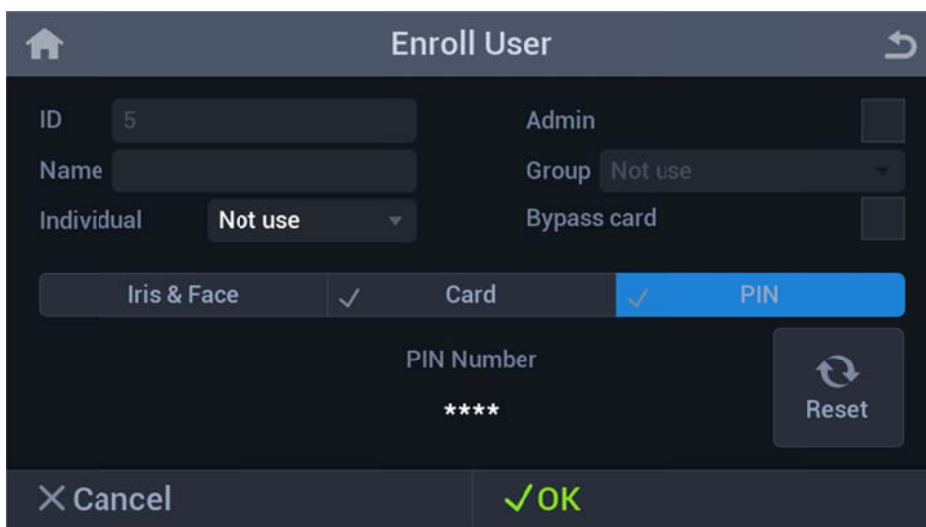


Pin number is shown as "\*" character.

**Reset** Clear pin number and (+) button is shown


**Cancel** Return to User Main screen

**OK** Save user data to complete PIN enrollment / return to User Main screen

## 2 Search



Tap the **Search** icon to browse list of enrolled users.

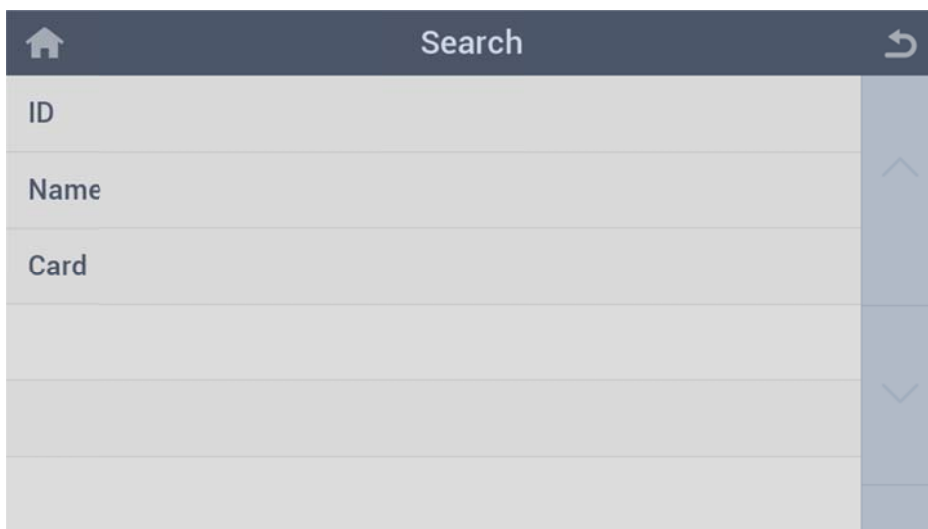


(Note: In construction)



### 3 Capacity Info




Tap the **Capacity Info** icon to check storage space.

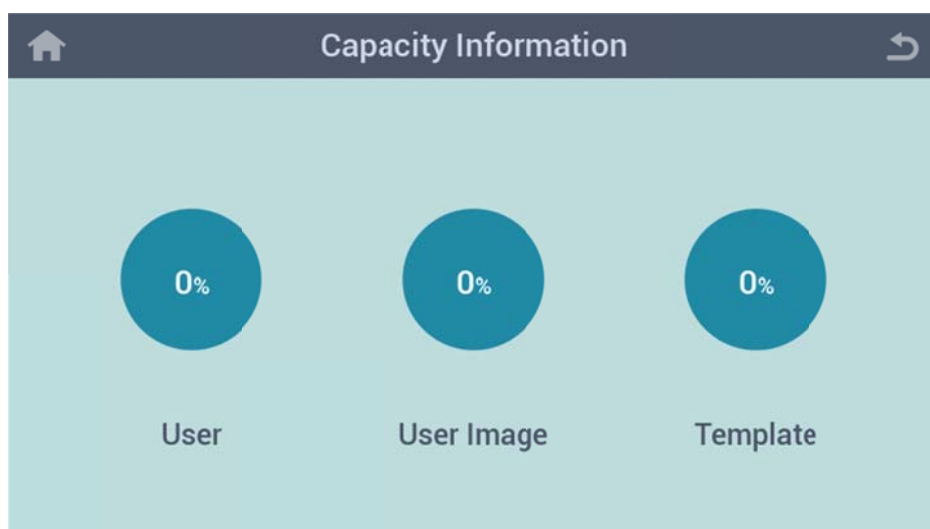


(Note: In construction)

## 4 Delete



Delete information of enrolled user.

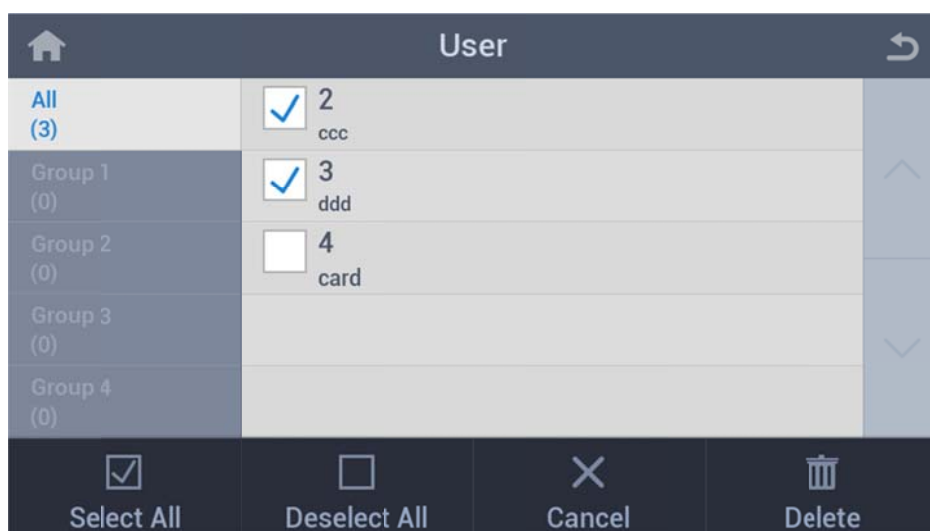


- Select All** Select all users
- Deselect All** Deselect all users
- Cancel** Return to User Main screen
- Delete** Delete selected user(s)

## Recognition Process


### 1.1 Recognition Process

Recognition process is identical to the enrollment process.

### 1.2 Recognition / Authentication Success

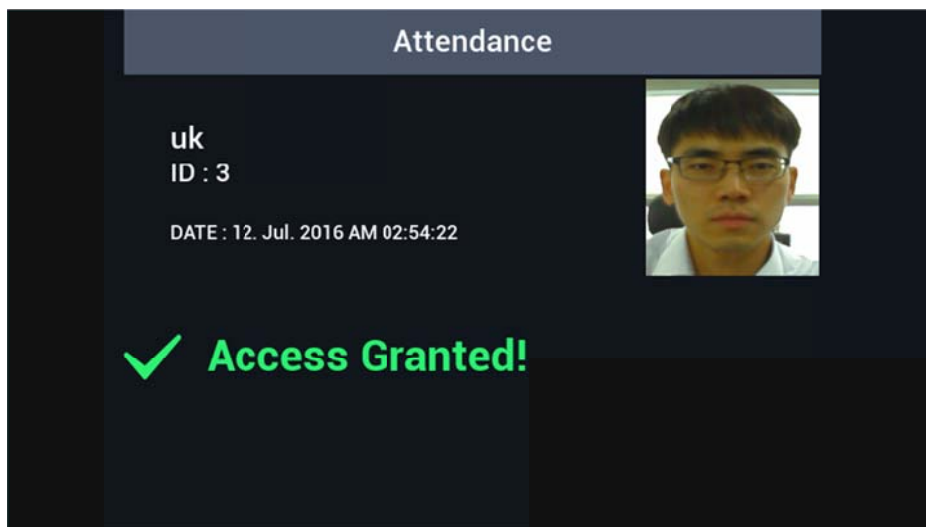

### 1.3 Recognition / Authentication Failure

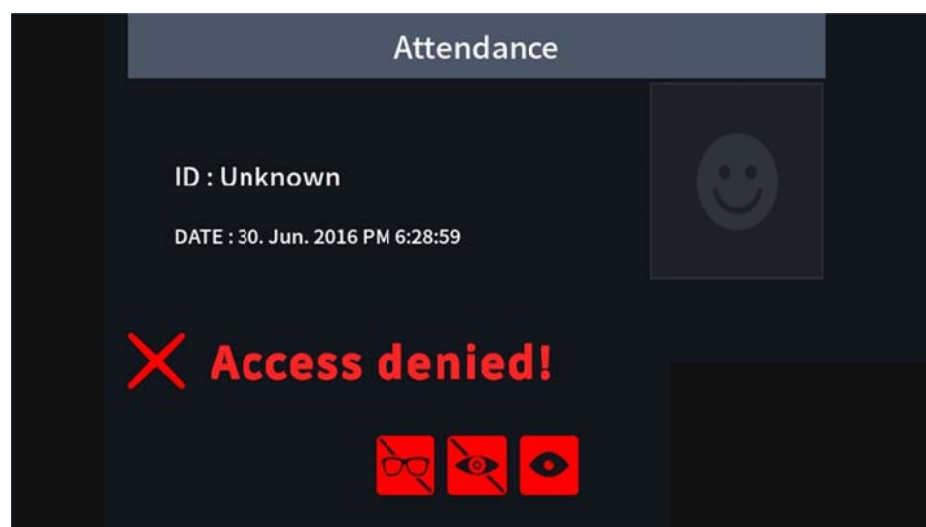

When access is denied, warning icons can appear on the screen.

- . Glasses: Device detects occlusion by glasses.
- . Color Lens: Device detects colored lenses.
- . Small Eye: Device cannot fully detect iris due to eyelid.

## FCC REQUIREMENTS PART 15

Caution: Any changes or modifications in construction of this device which are not expressly approved by the responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions;

1. This device may not cause harmful interface, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to this equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the radio or television off and on, the user is encouraged to try to

correct interference by one or more of the following measures.

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on another circuit.
4. Consult the dealer or an experienced radio/TV technician for help.